

 





 







 





















Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Guide	 Guide / EPG / -/--
 0	 0
 List	 Smart / List
 Menu	 Menu / Home
 Up	 Up
 Recordings	 Display / Media

Original	Replacement
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Back	 Back / Return
 V+	 Vol+
 Text	 Text / Goto
 P+	 CH+ / Page+
 OPT+	 Setup / OPT /
 P-	 CH- / Page-
 V-	 Vol-
 Info	 Info / Angle
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





Original	Replacement	Original	Replacement
 SUB	 Subtitle / EQ		
 <<	 << / Tune-		
 Play / Pause	 Play / Slow		
 Play / Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 Audio	 Audio / Lang I/II		
 TV / Radio	 TV/Radio /		
 Stop	 Stop / Hold		
 Rec	 Rec / Rec Mode		

Original	Replacement	Original	Replacement

