




Original	Replacement
 Standby / On	 Power
 BD	 Shift + 5
 DVD	 Shift + 2
 BDR / BDR	 Shift + 7
 HDMI	 Shift + 0
 TV	 Shift + 1
 CD	 Shift + 3
 NET	 Shift + 9
 ADPT	 Shift + Guide / EPG / -/-
 iPod / USB	 Shift + 8
 SAT / CBL	 Shift + Fav / Marker / PC
 MHL	 Shift + 4
 TUNER	 Shift + 6
 Input Select ↻	 CH- / Page-
 Input Select ↻	 CH+ / Page+
 i / Status	 Info / Angle
 Volume+	 Vol+

Original	Replacement
 Volume-	 Vol-
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Up	 Up
 Video	 Picture / Format
 Tools Menu	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Home Menu	 Menu / Home
 iPod Ctrl.	 D.Menu / Top
 Down	 Down
 Return	 Back / Return
 Features PHASE	 Red / Netflix / Search
 Features ECO	 Yellow / YouTube / Repeat
 MPX	 Shift + Pause / Step / Freeze
 Pause	 Pause / Step / Freeze





Original	Replacement	Original	Replacement
 BAND	 Shift + Play /	 3	 3
 Play	 Play / Slow	 + Favorite	 Fav / Marker / PC
 PTY	 Shift + Stop /	 Audio / THX	 Sound / Title
 Stop	 Stop / Hold	 4	 4
 Preset -	 Shift + I<< / Preset-	 Signal Sel.	 TV/Radio /
 I<<	 I<< / Preset-	 MCACC	 Zoom / Size
 Preset+	 Shift + >>I / Preset+	 5	 5
 >>I	 >>I / Preset+	 6	 6
 Tune-	 Shift + << /	 CH. Level	 Text / Goto
 <<	 << / Tune-	 Disp / Auto	 Display / Media
 Tune+	 Shift + >> /	 7	 7
 >>	 >> / Tune+	 Speakers	 Shift + Audio / Lang I/II
 Auto / ALC /	 Subtitle / EQ	 Dimmer	 Shift + Mute / Dimmer
 1	 1	 8	 8
 Standard	 Smart / List	 9	 9
 2	 2	 Sleep	 Sleep / Timer
 Adv. Surr.	 Eject / Surround	 Repeat	 Green / APP / Repeat





Original		Replacement		Original		Replacement	
	HDMI Out		AV / Input / RDS				
	0		0				
	Class		Exit / Cancel / Clear				
	Shuffle		Blue / Prime Video / Random				





 
 
 

 




Original	Replacement
 Standby / On	 Power
 BD	 Shift + 5
 DVD	 Shift + 2
 BDR / BDR	 Shift + 7
 HDMI	 Shift + 0
 TV	 Shift + 1
 CD	 Shift + 3
 NET	 Shift + 9
 ADPT	 Shift + Guide / EPG / -/-
 iPod / USB	 Shift + 8
 SAT / CBL	 Shift + Fav / Marker / PC
 MHL	 Shift + 4
 TUNER	 Shift + 6
 Input Select ↻	 CH- / Page-
 Input Select ↻	 CH+ / Page+
 i / Status	 Info / Angle
 Volume+	 Vol+

Original	Replacement
 Volume-	 Vol-
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Up	 Up
 Video	 Picture / Format
 Tools Menu	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Home Menu	 Menu / Home
 iPod Ctrl.	 D.Menu / Top
 Down	 Down
 Return	 Back / Return
 Features PHASE	 Red / Netflix / Search
 Features ECO	 Yellow / YouTube / Repeat
 MPX	 Shift + Pause / Step / Freeze
 Pause	 Pause / Step / Freeze




 


Original	Replacement
 BAND	 Shift + Play /
 Play	 Play / Slow
 PTY	 Shift + Stop /
 Stop	 Stop / Hold
 Preset -	 Shift + I<< / Preset-
 I<<	 I<< / Preset-
 Preset+	 Shift + >>I / Preset+
 >>I	 >>I / Preset+
 Tune-	 Shift + << /
 <<	 << / Tune-
 Tune+	 Shift + >> /
 >>	 >> / Tune+
 Auto / ALC /	 Subtitle / EQ
 1	 1
 Standard	 Smart / List
 2	 2
 Adv. Surr.	 Eject / Surround

Original	Replacement
 3	 3
 + Favorite	 Fav / Marker / PC
 Audio / THX	 Sound / Title
 4	 4
 Signal Sel.	 TV/Radio /
 MCACC	 Zoom / Size
 5	 5
 6	 6
 CH. Level	 Text / Goto
 Disp / Auto	 Display / Media
 7	 7
 Speakers	 Shift + Audio / Lang I/II
 Dimmer	 Shift + Mute / Dimmer
 8	 8
 9	 9
 Sleep	 Sleep / Timer
 Repeat	 Green / APP / Repeat





Original	Replacement	Original	Replacement
 HDMI Out	 AV / Input / RDS		
 0	 0		
 Class	 Exit / Cancel / Clear		
 Shuffle	 Blue / Prime Video / Random		

