













 












 









Original	Replacement
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + Guide / EPG / -/--
	 0
	 Back / Return
	 Picture / Format
	 Sound / Title
	 Fav / Marker / PC

Original	Replacement
	 Vol+
	 Audio / Lang I/II
	 CH+ / Page+
	 Vol-
	 Subtitle / EQ
	 CH- / Page-
	 Smart / List
	 D.Menu / Top
	 Info / Angle
	 AV / Input / RDS
	 Up
	 Display / Media
	 Left
	 OK
	 Right
	 Menu / Home
	 Down





Original	Replacement	Original	Replacement
 Exit	 Exit / Cancel / Clear	 Sleep	 Sleep / Timer
 Red	 Red / Netflix / Search	 T.Shift	 TV/Radio /
 Green	 Green / APP / Repeat	 USB	 Shift + 8
 Yellow	 Yellow / YouTube / Repeat	 EPG	 Guide / EPG / -/--
 Blue	 Blue / Prime Video / Random		
 << / Text/CC	 << / Tune-		
 << / Text/CC	 Text / Goto		
 Play/Pause /	 Play / Slow		
 Play/Pause /	 Pause / Step / Freeze		
 >> / Reveal	 >> / Tune+		
 I<< / Hold	 I<< / Preset-		
 I<< / Hold	 Shift + Stop /		
 >>I / Size	 >>I / Preset+		
 >>I / Size	 Zoom / Size		
 Stop / Index	 Stop / Hold		
 Aspect	 Shift + Picture / Format		
 Freeze	 Shift + Pause / Step / Freeze		

