


 









 








 



 




 


 







 



 
 


 



 



 


 
 
 


 
 




Original		Replacement		Original		Replacement	
	Power		Power		4		4
	Mute		Mute		5		5
	Menu		Menu		6		6
	Exit		Exit		7		7
	Guide		Guide		8		8
	Up / P+		Up		9		9
	Up / P+		Ch +		0		0
	Down / P-		Down		Recall		Back
	Down / P-		Ch -		i		Info
	Left / V-		Left		TV / Radio		TV/R
	Left / V-		Vol -		SAT		Smart
	OK		Ok		FAV		Pre Ch
	Right / V+		Right		Audio		Dual
	Right / V+		Vol +		Subtitle		Subt
	1		1		Text		Text
	2		2		Red		Red
	3		3		Green		Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Blue		Blue				
	UHF		Media				
	Sleep		Sleep				
	<<		<<				
	Play		Play				
	Pause		Pause				
	>>		>>				
	Step	+	Shift + Pause				
	Stop		Stop				
	Rec		Rec				
	Hold	+	Shift + Stop				

