







 



 







 

 
 
 



 







 





 

 

 



 






 
 



 









Original	Replacement	Original	Replacement
 Power	 Power	 CH MGR	 Display / Media
 TV	 Smart / List	 D.Menu	 D.Menu / Top
 TV	 Shift + 1	 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS	 << REW	 << / Tune-
 1	 1	 << REW	 I<< / Preset-
 2	 2	 Stop	 Stop / Hold
 3	 3	 Vol+	 Vol+
 4	 4	 >> FF	 >>I / Preset+
 5	 5	 >> FF	 >> / Tune+
 6	 6	 Play / Pause	 Play / Slow
 7	 7	 Play / Pause	 Pause / Step / Freeze
 8	 8	 Vol-	 Vol-
 9	 9	 Mute	 Mute / Dimmer
 0	 0	 P+	 CH+ / Page+
 -/--	 Shift + Guide / EPG / -/--	 P-	 CH- / Page-
 PRE-CH	 Back / Return	 Menu	 Menu / Home
 TV/DTV	 TV/Radio /	 Exit	 Exit / Cancel / Clear





Original	Replacement
Enter / OK	OK
Up	Up
Left	Left
Right	Right
Down	Down
Text / Mix	Text / Goto
Guide	Guide / EPG / -/--
Info	Info / Angle
Red	Red / Netflix / Search
Green	Green / APP / Repeat
PIP	Setup / OPT /
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
P.Mode	Picture / Format
S.Mode	Sound / Title
P.Size	Zoom / Size
SRS	Eject / Surround

Original	Replacement
Subtitle	Subtitle / EQ
Dual I-II	Audio / Lang I/II
Still	Shift + Pause / Step /





 












 











 

 

 





















 

 



 







 



Original	Replacement
DVD	Smart / List
DVD	+ Shift + 2
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
<< REW	<< / Tune-
<< REW	I<< / Preset-
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze

Original	Replacement
>> FF	>>I / Preset+
>> FF	>> / Tune+
Stop	Stop / Hold
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Enter / OK	OK
Up	Up
Left	Left
Right	Right
Down	Down
Info	Info / Angle





Original	Replacement
 STB	 Smart / List
 STB	 +  3 Shift + 3
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PRE-CH	 Back / Return
 Sleep	 Sleep / Timer
 << REW	 << / Tune-

Original	Replacement
 << REW	 I<< / Preset-
 Play / Pause	 Pause / Step / Freeze
 >> FF	 >>I / Preset+
 Play / Pause	 Play / Slow
 >> FF	 >> / Tune+
 Stop	 Stop / Hold
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Enter / OK	 OK
 Left	 Left
 Right	 Right



 













 





















Original	Replacement
	Down
	Guide
	Info
	Down
	Guide / EPG / -/--
	Info / Angle

Original	Replacement





Original	Replacement
 Mute	 Mute / Dimmer
 CABLE Power	 Power
 CABLE	 Smart / List
 VCR	 Display / Media
 CABLE 1	 1
 CABLE 2	 2
 CABLE 3	 3
 CABLE 4	 4
 CABLE 5	 5
 CABLE 6	 6
 CABLE 7	 7
 CABLE 8	 8
 CABLE 9	 9
 CABLE 0	 0
 Vol+	 Vol+
 Vol-	 Vol-
 CABLE P-	 CH- / Page-

Original	Replacement
 CABLE P+	 CH+ / Page+
 VCR Power	 Shift + Power
 VCR Menu	 Menu / Home
 VCR Exit	 Exit / Cancel / Clear
 VCR 1	 Shift + 1
 VCR 2	 Shift + 2
 VCR 3	 Shift + 3
 VCR 4	 Shift + 4
 VCR 5	 Shift + 5
 VCR 6	 Shift + 6
 VCR 7	 Shift + 7
 VCR 8	 Shift + 8
 VCR 9	 Shift + 9
 VCR 0	 Shift + 0
 VCR P+	 Shift + CH+ /
 VCR P-	 Shift + CH- /
 VCR Up	 Up





Original	Replacement
VCR Left	Left
VCR Enter/OK	OK
VCR Right	Right
VCR Down	Down
VCR Info	Info / Angle
VCR Stop	Stop / Hold
VCR << REW	<< / Tune-
VCR << REW	I<< / Preset-
VCR Play/Pause	Play / Slow
VCR Play/Pause	Pause / Step / Freeze
VCR >> FF	>> / Tune+
VCR >> FF	>>I / Preset+

Original	Replacement

