



Original	Replacement	Original	Replacement
Power Receiver	Power	CD	Shift + 3
1	1	D.TUN	Smart / List
VCR / DVR	Shift + 4	Dimmer	Shift + Mute / Dimmer
2	2	0	0
CBL / SAT	Shift + 0	Sleep	Sleep / Timer
3	3	CH+	CH+ / Page+
4	4	Vol+	Vol+
AUX	Shift + 7	CH-	CH- / Page-
5	5	Vol-	Vol-
Multi CH	Shift + 1	SP A/B	Info / Angle
6	6	Up	Up
DVD	Shift + 2	Muting	Mute / Dimmer
7	7	Left	Left
TAPE	Shift + 5	Enter	OK
8	8	Right	Right
TUNER	Shift + 6	Setup	Setup / OPT /
9	9	Down	Down





Original	Replacement
Return	Back / Return
Pause / Play Rev.	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Stereo	Audio / Lang I/II
Surround	Eject / Surround
< Listening Mode	Shift + I<< / Preset-
Listening Mode >	Shift + >>I / Preset+
Test Tone	Red / Netflix / Search
CH Sel	Green / APP / Repeat
Level-	Yellow / YouTube / Repeat
Level+	Blue / Prime Video / Random
Display	Display / Media

Original	Replacement
L.Night	Menu / Home
Cine FLTR	D.Menu / Top





Original	Replacement
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10/10/-/-	Guide / EPG / -/-
0/11	0
CLR/12/Sleep	Sleep / Timer
CLR/12/Sleep	Exit / Cancel / Clear
Guide/Top	D.Menu / Top
Up	Up
Previous Menu/Muting	Menu / Home

Original	Replacement
Left/Playlist/Cat-	Left
Enter	OK
Right/Playlist/Cat	Right
Setup	Setup / OPT /
Down	Down
Return	Back / Return
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Stereo	Sound / Title
Surround	Eject / Surround
< Listening Mode	Shift + I<< / Preset-
Listening Mode >	Shift + >>I / Preset+



 














 















 











 





 
 


 



 






Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 1	 1	 Pause	 Pause / Step / Freeze
 2	 2	 Play	 Play / Slow
 3	 3	 Stop	 Stop / Hold
 4	 4	 <<	 << / Tune-
 5	 5	 >>	 >> / Tune+
 6	 6	 I<<	 I<< / Preset-
 7	 7	 >>I	 >>I / Preset+
 8	 8	 Stereo	 Audio / Lang I/II
 9	 9	 Surround	 Eject / Surround
 +10/10/-/-	 Guide / EPG / -/-	 < Listening Mode	 Shift + I<< / Preset-
 0	 0	 Listening Mode >	 Shift + >>I / Preset+
 CLR/12/Sleep	 Sleep / Timer	 Level-/Random	 Blue / Prime Video / Random
 CLR/12/Sleep	 Exit / Cancel / Clear	 Level+/Repeat	 Green / APP / Repeat
 Disc/Album	 CH+ / Page+	 Display	 Display / Media
 Vol+	 Vol+		
 Disc/Album CH-	 CH- / Page-		

Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 1	 1	 Pause	 Pause / Step / Freeze
 2	 2	 Play	 Play / Slow
 3	 3	 Stop	 Stop / Hold
 4	 4	 <<	 << / Tune-
 5	 5	 >>	 >> / Tune+
 6	 6	 I<<	 I<< / Preset-
 7	 7	 >>I	 >>I / Preset+
 8	 8	 Stereo	 Audio / Lang I/II
 9	 9	 Surround	 Eject / Surround
 +10/10/-/-	 Guide / EPG / -/-	 < Listening Mode	 Shift + I<< / Preset-
 0	 0	 Listening Mode >	 Shift + >>I / Preset+
 CLR/12/Sleep	 Sleep / Timer	 Level-/Random	 Blue / Prime Video / Random
 CLR/12/Sleep	 Exit / Cancel / Clear	 Level+/Repeat	 Green / APP / Repeat
 Disc/Album	 CH+ / Page+	 Display	 Display / Media
 Vol+	 Vol+		
 Disc/Album CH-	 CH- / Page-		





Original	Replacement
 Standby / On	 Power
 VCR/DVR	 4
 CBL/SAT	 0
 AUX	 7
 Multi CH	 1
 DVD	 2
 Tape	 5
 Tuner	 6
 CD	 3
 D.Tun	 Smart / List
 Dimmer	 +  Shift + Mute / Dimmer
 CLR / Sleep	 Sleep / Timer
 CLR / Sleep	 Exit / Cancel / Clear
 CH Disc	 CH+ / Page+
 Vol+	 Vol+
 CH Disc Album-	 CH- / Page-
 Vol-	 Vol-

Original	Replacement
 Up	 Up
 Muting	 Mute / Dimmer
 Left/Playlist/Cat-	 Left
 Enter	 OK
 Right/Playlist/Cat	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Rev. Play	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 Stereo	 Audio / Lang I/II
 Surround	 Eject / Surround
 < Listening Mode	 I<< / Preset-
 Listening Mode >	 >>I / Preset+



