 










 


 



 






















 




 


 





 








 







Original	Replacement	Original	Replacement
 Power Receiver	 Power	 CD	 Shift + 3
 1	 1	 D.TUN	 Smart / List
 VCR / DVR	 Shift + 4	 Dimmer	 Shift + Mute / Dimmer
 2	 2	 0	 0
 CBL / SAT	 Shift + 0	 Sleep	 Sleep / Timer
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Vol+	 Vol+
 AUX	 Shift + 7	 CH-	 CH- / Page-
 5	 5	 Vol-	 Vol-
 Multi CH	 Shift + 1	 SP A/B	 Info / Angle
 6	 6	 Up	 Up
 DVD	 Shift + 2	 Muting	 Mute / Dimmer
 7	 7	 Left	 Left
 TAPE	 Shift + 5	 Enter	 OK
 8	 8	 Right	 Right
 TUNER	 Shift + 6	 Setup	 Setup / OPT /
 9	 9	 Down	 Down





Original	Replacement
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10/10/-/-	Guide / EPG / -/-
0/11	0
CLR/12/Sleep	Sleep / Timer
CLR/12/Sleep	Exit / Cancel / Clear
Guide/Top	D.Menu / Top
Up	Up
Previous Menu/Muting	Menu / Home

Original	Replacement
Left/Playlist/Cat-	Left
Enter	OK
Right/Playlist/Cat	Right
Setup	Setup / OPT /
Down	Down
Return	Back / Return
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Stereo	Sound / Title
Surround	Eject / Surround
< Listening Mode	Shift + I<< / Preset-
Listening Mode >	Shift + >>I / Preset+





Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 1	 1	 Pause	 Pause / Step / Freeze
 2	 2	 Play	 Play / Slow
 3	 3	 Stop	 Stop / Hold
 4	 4	 <<	 << / Tune-
 5	 5	 >>	 >> / Tune+
 6	 6	 I<<	 I<< / Preset-
 7	 7	 >>I	 >>I / Preset+
 8	 8	 Stereo	 Audio / Lang I/II
 9	 9	 Surround	 Eject / Surround
 +10/10/-/-	 Guide / EPG / -/-	 < Listening Mode	 Shift + I<< / Preset-
 0	 0	 Listening Mode >	 Shift + >>I / Preset+
 CLR/12/Sleep	 Sleep / Timer	 Level-/Random	 Blue / Prime Video / Random
 CLR/12/Sleep	 Exit / Cancel / Clear	 Level+/Repeat	 Green / APP / Repeat
 Disc/Album	 CH+ / Page+	 Display	 Display / Media
 Vol+	 Vol+		
 Disc/Album CH-	 CH- / Page-		

Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 1	 1	 Pause	 Pause / Step / Freeze
 2	 2	 Play	 Play / Slow
 3	 3	 Stop	 Stop / Hold
 4	 4	 <<	 << / Tune-
 5	 5	 >>	 >> / Tune+
 6	 6	 I<<	 I<< / Preset-
 7	 7	 >>I	 >>I / Preset+
 8	 8	 Stereo	 Audio / Lang I/II
 9	 9	 Surround	 Eject / Surround
 +10/10/-/-	 Guide / EPG / -/-	 < Listening Mode	 Shift + I<< / Preset-
 0	 0	 Listening Mode >	 Shift + >>I / Preset+
 CLR/12/Sleep	 Sleep / Timer	 Level-/Random	 Blue / Prime Video / Random
 CLR/12/Sleep	 Exit / Cancel / Clear	 Level+/Repeat	 Green / APP / Repeat
 Disc/Album	 CH+ / Page+	 Display	 Display / Media
 Vol+	 Vol+		
 Disc/Album CH-	 CH- / Page-		





Original	Replacement
Standby / On	Power
VCR/DVR	4
CBL/SAT	0
AUX	7
Multi CH	1
DVD	2
Tape	5
Tuner	6
CD	3
D.Tun	Smart / List
Dimmer	Shift + Mute / Dimmer
CLR / Sleep	Sleep / Timer
CLR / Sleep	Exit / Cancel / Clear
CH Disc	CH+ / Page+
Vol+	Vol+
CH Disc Album-	CH- / Page-
Vol-	Vol-

Original	Replacement
Up	Up
Muting	Mute / Dimmer
Left/Playlist/Cat-	Left
Enter	OK
Right/Playlist/Cat	Right
Setup	Setup / OPT /
Down	Down
Return	Back / Return
Rev. Play	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<< / Tune-	<< / Tune-
>> / Tune+	>> / Tune+
Stereo	Audio / Lang I/II
Surround	Eject / Surround
< Listening Mode	I<< / Preset-
Listening Mode >	>>I / Preset+



