



 

 
 
 
 

 





 


 




 
 

 

 

 
 





 




 

 

 

 
 
 

 












 








 



 





 

 




Original	Replacement	Original	Replacement
 Power	 Power	 +10	 Guide
 Quick OSD	 Media	 Cancel	 Exit
 FL Select	 Smart	 Play Speed	 Red
 Open/Close	 Eject	 Dialogue	 Green
 Advanced	 TV/R	 Manual Skip	 Yellow
 Picture Mode	 Format	 Quick Replay	 List
 Repeat	 Text	 I<< Skip	 I<<
 1	 1	 Skip >>I	 >>I
 2	 2	 << Slow/Search	 <<
 3	 3	 Slow/Search >>	 >>
 4	 4	 Stop	 Stop
 5	 5	 Pause	 Pause
 6	 6	 Play	 Play
 7	 7	 Top Menu	 Shift + Menu
 8	 8	 Menu	 Menu
 9	 9	 Functions	 D. Menu
 0	 0	 Return	 Back





Original		Replacement		Original		Replacement	
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	Enter		Ok				
	Subtitle		Subt				
	Audio		Dual				
	Angle/Page		Blue				
	Play Mode		Shift + Play				
	Setup		Options				
	Transfer Mode		AV				
	Zoom		Shift + Eject				
	DNR		3D				

