

 



 

 

 
 
 
 
 
 
 





 

 



 

 
 
 
 
 



 
 



 
 
 
 
 

 

 
 
 
 



 



 
 


 








 






 
 









	Original	Replacement		Original	Replacement
	 Power	 Power		 Search >>I/Up	 >>I
	 1	 1		 I<<	 I<<
	 2	 2		 Tuner/Band	 TV/R
	 3	 3		 Auto Preset	 Smart
	 4	 4		 Tape >	 Right
	 5	 5		 < Tape	 Left
	 6	 6		 Stop Tape	 Ok
	 7	 7		 Rec/Pause Tape	 Rec
	 8	 8		 >> Tape	 >>
	 9	 9		 << Tape	 <<
	 10	 0		 Active Hyper-Bass	 Media
	 +10	 Guide		 Sound	 Dual
	 Sleep	 Sleep		 Volume+	 Vol +
	 Open/Close CD	 Eject		 Volume-	 Vol -
	 Play CD	 Play		 Treble+	 Ch +
	 Pause CD	 Pause		 Treble-	 Ch -
	 Stop/Clear CD	 Stop		 Bass+	 Up





Original		Replacement		Original		Replacement	
	Bass-		Down				
	Clock		AV				
	Intro		Info				
	Random		Options				
	Repeat		Text				
	Program	 + 	Shift + Sleep				
	Edit		Exit				
	Side A/B		3D				
	Mode		Format				
	Syncrho Rec		Pre Ch				

