 



 



 

 

 

 
 



 



 




















 
 


Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	TXT		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement	Original	Replacement
	Exit		Exit / Cancel / Clear
	?		D.Menu / Top
	@		Smart / List
	Menu		Menu / Home
	Up		Up
	Back		Back / Return
	Left		Left
	OK		OK
	Right		Right
	Tools		Setup / OPT /
	Down		Down
	Guide		Guide / EPG / -/--
	Vol+		Vol+
	Source		AV / Input / RDS
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer





Original		Replacement		Original		Replacement	
	P-		CH- / Page-				
	l<		l<< / Preset-				
	>l		>>l / Preset+				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	3D		Picture / Format				
	..0		Zoom / Size				
	[...].		Subtitle / EQ				
	Netflix	 + 	Shift + Red / Netflix /				
	My Media		Display / Media				

