

 





 






 



 




 



 




 







 





 


 










Original	Replacement
 Power	 Power
 Menu	 Menu
 Guide	 Guide
 Input Tv	 TV/R
 Input AV	 AV
 i	 INFO
 X/Exit	 EXIT
 APPS	 APP MEDIA
 Netflix	 SHIFT + APP MEDIA Shift + Media
 Home	 HOME SMART
 Option	 SETTINGS OPT
 Back/Return	 RETURN BACK
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK

Original	Replacement
 Red	 A Red
 Green	 B Green
 Yellow	 C Yellow
 Blue	 D Blue
 Text	 REPEAT TEXT
 STTL	 AD SUBT
 Aspect	 PICTURE FORMAT
 Vol+	 + VOL
 Vol-	 VOL -
 Mute	 MUTE
 CH+	 + CH
 CH-	 CH -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Original	Replacement	Original	Replacement
	6			
	7			
	8			
	9			
	0			
	eHelp			
	Last View			
	<<			
	Play			
	>>			
	I<<			
	Pause			
	>>I			
	Stop			
	Rec			

