









 







 



 



 

 

 









 



 



























Original	Replacement	Original	Replacement
	Sleep		Sleep / Timer
	Power		Power
	Source		AV / Input / RDS
	I-II		Audio / Lang I/II
	I.S.		Smart / List
	[i+]		Info / Angle
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Smart Audio		Sound / Title
	0		0
	Smart Picture		Picture / Format
	Menu		Menu / Home
	Up		Up
	OK		OK
	Left		Left
	Right		Right
	Vol+		Vol+
	Down		Down
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[X]		Exit / Cancel / Clear





Original		Replacement	
	[↓] / ☹	SIZE ZOOM	Zoom / Size
	[□]	HOLD	Stop / Hold
	[≡]	GOTO TEXT	Text / Goto
	[/≡]	SHIFT + GOTO TEXT	Shift + Text /
	[?]	TOP MENU D.MENU	D.Menu / Top
	[≡i]	MEDIA DISPLAY	Display / Media

Original		Replacement	

