 
 

 

 
 





 

 

 


 
 


 

 
 


 
 




Original	Replacement	Original	Replacement
 Power	 Power	 A-B	 TV/R
 Sleep	 Sleep	 Program	 Shift + Sleep
 Dimmer	 Media	 Volume+	 Vol +
 Open/Close	 Eject	 Volume-	 Vol -
 1	 1	 Mute	 Mute
 2	 2	 Title	 List
 3	 3	 Menu/PBC	 Menu
 4	 4	 Return	 Back
 5	 5	 Setup	 Options
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Enter	 Ok
 >10	 Guide	 Stop	 Stop
 Repeat	 Text	 Play	 Play
 Goto	 3D	 Pause	 Pause

Original	Replacement	Original	Replacement
 TV	 TV/R	 A-B	 TV/R
 DVD	 Shift + Sleep	 Program	 Shift + Sleep
 SAT	 Vol +	 Volume+	 Vol +
 AUX	 Vol -	 Volume-	 Vol -
 TV	 Mute	 Mute	 Mute
 DVD	 List	 Title	 List
 SAT	 Menu	 Menu/PBC	 Menu
 AUX	 Back	 Return	 Back
 TV	 Options	 Setup	 Options
 DVD	 Up	 Up	 Up
 SAT	 Down	 Down	 Down
 AUX	 Right	 Right	 Right
 TV	 Left	 Left	 Left
 DVD	 Ok	 Enter	 Ok
 SAT	 Stop	 Stop	 Stop
 AUX	 Play	 Play	 Play
 TV	 Pause	 Pause	 Pause





Original		Replacement		Original		Replacement	
	<<		<<				
	>>		>>				
	<<		<<				
	>>		>>				
	Language		Dual				
	Subtitle		Subt				
	PAL/NTSC		Format				
	Audio		Shift + Dual				
	Zoom		Shift + Eject				
	Angle		Smart				
	Slow		AV				
	Display		Info				
	Nothing		Pre Ch				

