

 
 




 

 


 

 
 
 
 
 



 


 
 

 

 

 
 

 

 
 


 
 
 
 









 

 

 










Original	Replacement	Original	Replacement
	Standby - On		Power
	TV / DVD		AV
	Edit		TV/R
	Select		Info
	CH+		Ch +
	Up		Up
	Down		Down
	CH-		Ch -
	Right		Right
	Left		Left
	OK		Ok
	Menu Disc		D. Menu
	Menu System		Menu
	Timer		Sleep
	T/C		Guide
	Browser		Smart
	Tuner		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Stop		Stop
	Play		Play
	Rec		Rec
	Pause		Pause
	Rec Mode		Shift + Rec
	I<<		I<<
	>>I		>>I



 






 
 
 
 

 




Original	Replacement	Original	Replacement
 Return	 Back		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Tv Vol-	 Vol -		
 Tv Vol+	 Vol +		





Original	Replacement
 Standby - On	 Power
 TV / DVD	 TV/R
 Up	 Up
 CH+	 Ch +
 CH-	 Ch -
 Down	 Down
 OK	 Ok
 Menu System	 Menu
 Timer	 Sleep
 T/C	 Guide
 Tuner	 Subt
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Replacement
 7	 7
 8	 8
 9	 9
 0	 0
 Rec	 Rec
 Return	 Back
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Tv Vol-	 Vol -
 Tv Vol+	 Vol +

