 

 





 





Original	Replacement	Original	Replacement
 POWER	 Power	 GUIDE	 Guide
 MENU	 Menu	 UP	 Up
 LAST	 Pre Ch	 OK	 Ok
 MUTE	 Mute	 DOWN	 Down
 TEXT	 Text	 LEFT	 Left
 MODE	 TV/R	 RIGHT	 Right
 1	 1	 VOL+	 Vol +
 2	 2	 VOL-	 Vol -
 3	 3	 PR-	 Ch -
 6	 6	 PR+	 Ch +
 5	 5	 SWAP	 Shift + Green
 4	 4	 ZOOM	 Eject
 7	 7	 RED / MOSAIC	 Red
 8	 8	 BACK	 Back
 9	 9	 GREEN / SLEEP	 Green
 FAV	 Shift + Pre Ch	 YELLOW /	 Yellow
 0	 0	 BLUE / LIST	 Blue





Original	Replacement	Original	Replacement
PAGE DOWN	Shift + Ch -		
PAGE UP	Shift + Ch +		
TIME SHIFT	Smart		
STOP	Stop		
REC	Rec		
REW	<<<		
PLAY / PAUSE	Play		
FWD	>>>		
PLAY / PAUSE	Pause		
OPTION	Options		
PIP	Shift + Red		
TIMER	AV		
MEDIA	Media		
PAUSE	Shift + Yellow		
V. FORMAT	Format		
INFO	Info		

Original	Replacement	Original	Replacement

