



 





 

 







 

 

 













	Original	Replacement
	 Display	 Display / Media
	 Power	 Power
	 Function-	 Shift + Down
	 Function+	 Shift + Up
	 Sound	 Sound / Title
	 Menu	 Menu / Home
	 Timer	 Sleep / Timer
	 Up	 Up
	 Folder-	 CH- / Page-
	 OK	 OK
	 Folder+	 CH+ / Page+
	 Down	 Down
	 Return	 Back / Return
	 Clear	 Exit / Cancel / Clear
	 I<</Preset-	 I<< / Preset-
	 Play	 Play / Slow
	 Pause	 Pause / Step / Freeze

	Original	Replacement
	 >>I/Preset+	 >>I / Preset+
	 <</Tuning-	 << / Tune-
	 Stop	 Stop / Hold
	 >>/Tuning+	 >> / Tune+
	 Vol+	 Vol+
	 Vol-	 Vol-

