

Original	Replacement	Original	Replacement
Stereo	Dual	Select	Ok
Level	Media	Menu	D. Menu
Delay	Options	Display	Info
Surround	Subt	Disc/Deck 1/2	Menu
TV	TV/R	Tv/AV	AV
CD	Yellow	+	Ch +
DVD	Blue	-	Ch -
Tuner/Band	Green	Test	Text
Tape	Red	Power TV	Power
VCR	Smart	Tv Vol Up	Shift + Vol +
Vol+	Vol +	Tv Vol Down	Shift + Vol -
Vol-	Vol -	1 Tv	1
Muting	Mute	2 Tv	2
Up	Up	3 Tv	3
Down	Down	4 Tv	4
Right	Right	5 Tv	5
Left	Left	6 Tv	6

 




 






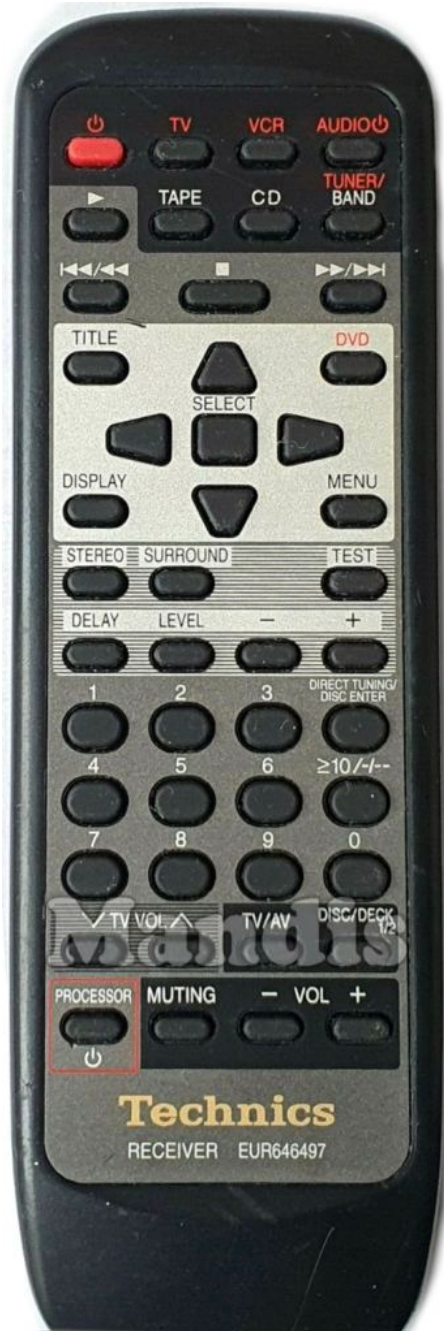





	Original	Replacement		Original	Replacement
	7 Tv		7		
	8 Tv		8		
	9 Tv		9		
	0 Tv		0		
	>10/--- Tv		Guide		

 
	Original	Replacement





Original	Replacement	Original	Replacement
 Power DVD	 Power	 Menu	 D. Menu
 Level	 Media	 Up	 Up
 Delay	 Options	 Down	 Down
 Surround	 Subt	 Right	 Right
 Stereo	 Dual	 Left	 Left
 TV	 TV/R	 Select	 Ok
 VCR	 Smart	 Test	 Text
 Tuner/Band	 Green	 +	 Ch +
 Tape	 Red	 -	 Ch -
 CD	 Yellow	 1 DVD	 1
 DVD	 Blue	 2 DVD	 2
 Play DVD	 Play	 3 DVD	 3
 I<</<< DVD	 <<	 4 DVD	 4
 Stop DVD	 Stop	 5 DVD	 5
 >>/>>I DVD	 >>	 6 DVD	 6
 Disc/Deck 1/2	 Menu	 7 DVD	 7
 Display	 Info	 8 DVD	 8



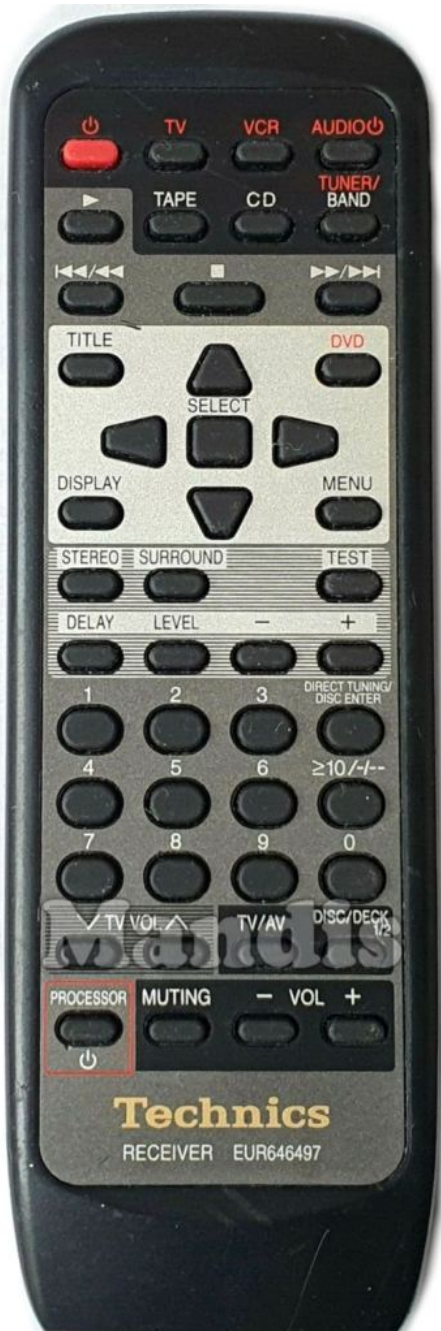

 
	Original	Replacement	Original	Replacement
	9 DVD			
	0 DVD			
	>10/--- DVD			
	Vol+			
	Vol-			
	Muting			





Original	Replacement	Original	Replacement
	Power CD		Power
	Level		Media
	Surround		Subt
	Delay		Options
	Stereo		Dual
	TV		TV/R
	VCR		Smart
	CD		Yellow
	DVD		Blue
	Tape		Red
	Tuner/Band		Green
	Stop CD		Stop
	I<<</>>I CD		<<
	>>>/<<<I CD		>>
	Play CD		Play
	Menu		D. Menu
	Display		Info
	Disc/Deck 1/2		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Select		Ok
	Test		Text
	+		Ch +
	-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Power Tape		Shift + Power
	Stop Tape		Shift + Stop
	Play Tape		Shift + Play
	I<<</>>I Tape		Shift + <<
	>>>/<<<I Tape		Shift + >>

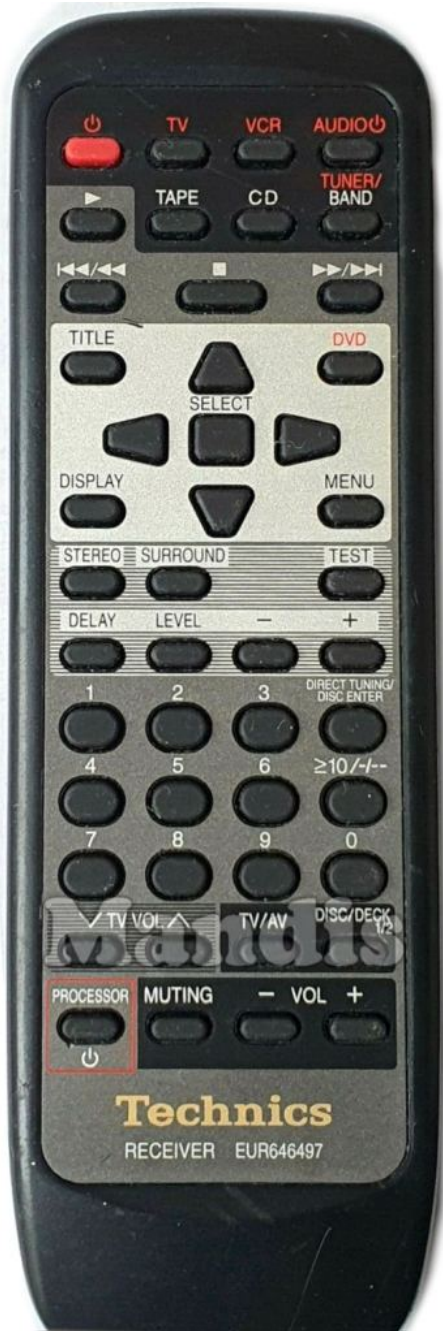 


 

 





 



 

 

 

 

 

 

 

 


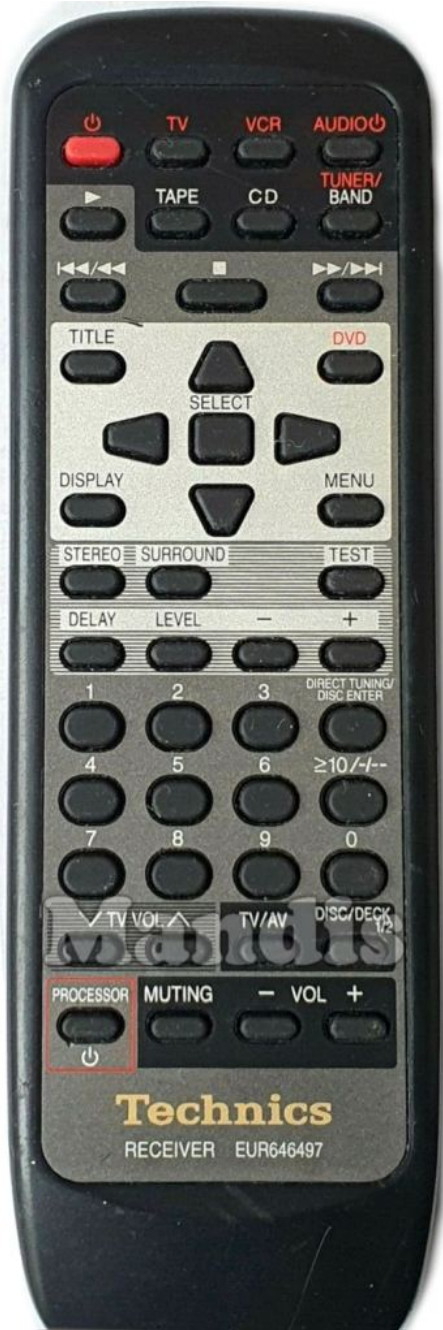
 



 





 




 
 





 



 

 










	Original	Replacement	
	Disc/Deck 1/2	 + 	Shift + Menu
	1 CD-Tape		1
	2 CD-Tape		2
	3 CD-Tape		3
	4 CD-Tape		4
	5 CD-Tape		5
	6 CD-Tape		6
	7 CD-Tape		7
	8 CD-Tape		8
	9 CD-Tape		9
	0 CD-Tape		0
	>10/-- CD-Tape		Guide
	Direct Tuning/Disc Enter		List

 
	Original	Replacement




 

 


Original		Replacement		Original		Replacement	
	Power VCR		Power		3 VCR		3
	Level		Media		4 VCR		4
	Delay		Options		5 VCR		5
	Surround		Subt		6 VCR		6
	Stereo		Dual		7 VCR		7
	VCR		Smart		8 VCR		8
	Tape		Red		9 VCR		9
	TV		TV/R		0 VCR		0
	CD		Yellow		>10/-/- VCR		Guide
	DVD		Blue		Direct Tuning/Disc Enter		List
	Tuner/Band		Green		Vol+		Vol +
	Stop		Stop		Vol-		Vol -
	I<</<<		<<		Muting		Mute
	>>/>>I		>>		Up		Up
	Play		Play		Down		Down
	1 VCR		1		Right		Right
	2 VCR		2		Left		Left



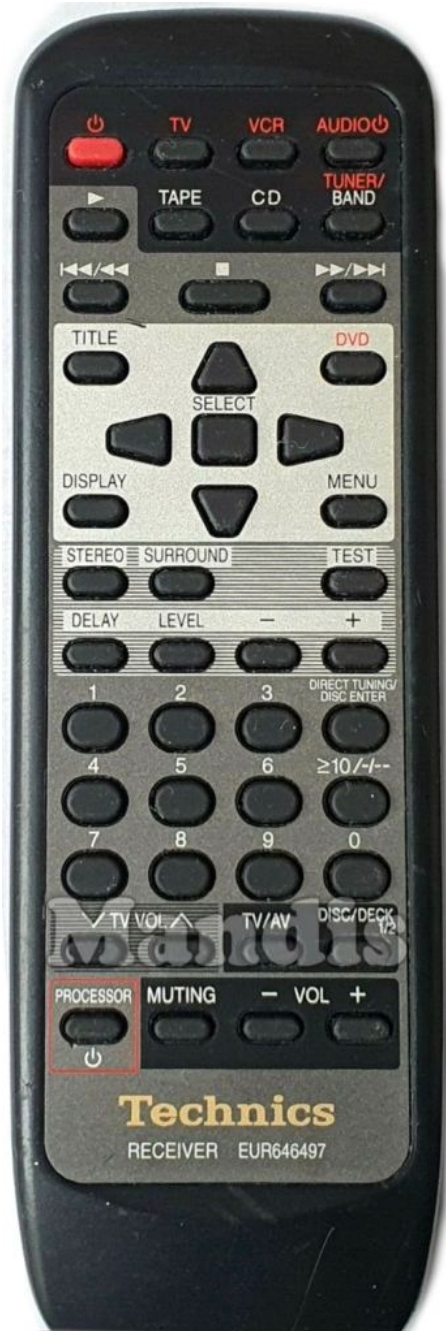

Original	Replacement
 Select	 Ok
 Disc/Deck 1/2	 Menu
 Display	 Info
 Menu	 D. Menu
 Test	 Text
 +	 Ch +
 -	 Ch -
 Power Tuner/Band	 Shift + Power
 1 Tuner/Band	 Shift + 1
 2 Tuner/Band	 Shift + 2
 3 Tuner/Band	 Shift + 3
 4 Tuner/Band	 Shift + 4
 5 Tuner/Band	 Shift + 5
 6 Tuner/Band	 Shift + 6
 7 Tuner/Band	 Shift + 7
 8 Tuner/Band	 Shift + 8
 9 Tuner/Band	 Shift + 9

Original	Replacement
 0 Tuner/Band	 Shift + 0
 >10/-/-	 Shift + Guide

