
 















 
 

 









 


 

 












 


 




 
 
 


| Original  | Replacement  |
|---|--|
|  Power     |  Power    |
|  SD        |  Smart    |
|  [ + ]     |  Info     |
|  Tv/AV     |  AV       |
|  Menu      |  Menu     |
|  Exit      |  Exit     |
|  Up        |  Up       |
|  Down      |  Down     |
|  Right     |  Right    |
|  Left      |  Left     |
|  OK       |  Ok      |
|  Red     |  Red    |
|  Green   |  Green  |
|  Yellow  |  Yellow |
|  Blue    |  Blue   |
|  Tv/Text |  Text   |
|  F.P.    |  Eject  |

| Original  | Replacement   |
|---|---|
|  Index |  List    |
|  Hold  |  Options |
|  N     |  Media   |
|  CH+   |  Ch +    |
|  CH-   |  Ch -    |
|  Vol+  |  Vol +   |
|  Vol-  |  Vol -   |
|  Mute  |  Mute    |
|  1     |  1       |
|  2     |  2       |
|  3    |  3      |
|  4   |  4     |
|  5   |  5     |
|  6   |  6     |
|  7   |  7     |
|  8   |  8     |
|  9   |  9     |























| Original  |                | Replacement   |               | Original |  | Replacement |  |
|---|----------------|---|---------------|----------|--|-------------|--|
|    | 0              |                                | 0             |          |  |             |  |
|    | -/--           |                                | Guide         |          |  |             |  |
|    | C              |                                | Pre Ch        |          |  |             |  |
|    | Aspect         |                                | 3D            |          |  |             |  |
|    | Multiwindow    |                                | D. Menu       |          |  |             |  |
|    | Direct Tv Rec  |                                | TV/R          |          |  |             |  |
|    | Power VCR      |                                | Shift + Power |          |  |             |  |
|    | Rec VCR        |                                | Rec           |          |  |             |  |
|    | Programme Up   |                                | Shift + Ch +  |          |  |             |  |
|   | Programme Down |                               | Shift + Ch -  |          |  |             |  |
| << VCR button" data-bbox="231 673 261 708"/>  | << VCR         |  | <<            |          |  |             |  |
|  | >> VCR         |                              | >>            |          |  |             |  |
|  | Stop VCR       |                              | Stop          |          |  |             |  |
|  | Pause/Step VCR |                              | Pause         |          |  |             |  |
|  | Play VCR       |                              | Play          |          |  |             |  |
|   |                |   |               |          |  |             |  |







| Original  |                | Replacement   |       | Original |  | Replacement |  |
|---|----------------|---|-------|----------|--|-------------|--|
|  | Power DVD      |  | Power |          |  |             |  |
|  | Rec DVD        |  | Rec   |          |  |             |  |
|  | Programme Up   |  | Ch +  |          |  |             |  |
|  | Programme Down |  | Ch -  |          |  |             |  |
|  | << DVD         |  | <<    |          |  |             |  |
|  | >> DVD         |  | >>    |          |  |             |  |
|  | Stop DVD       |  | Stop  |          |  |             |  |
|  | Pause/Step DVD |  | Pause |          |  |             |  |
|  | Play DVD       |  | Play  |          |  |             |  |
|   |                |   |       |          |  |             |  |
|   |                |   |       |          |  |             |  |
|   |                |   |       |          |  |             |  |
|   |                |   |       |          |  |             |  |
|   |                |   |       |          |  |             |  |
|   |                |   |       |          |  |             |  |
|   |                |   |       |          |  |             |  |
|   |                |   |       |          |  |             |  |
|   |                |   |       |          |  |             |  |
|   |                |   |       |          |  |             |  |
|   |                |   |       |          |  |             |  |
|   |                |   |       |          |  |             |  |

