















 

 




 




Original	Replacement
DVD	Shift + 2
VCR	Shift + 4
Input Sel.	AV / Input / RDS
Standby / On	Power
Open / Close	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Angle	Shift + Info / Angle
0	0
Audio	Audio / Lang I/II

Original	Replacement
I<<	I<< / Preset-
F.ADV / Skip	Fav / Marker / PC
Pause	Pause / Step / Freeze
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Play	Play / Slow
>>	>> / Tune+
PROG/TRK +	CH+ / Page+
PROG/TRK -	CH- / Page-
Menu	Menu / Home
Up	Up
Return	Back / Return
Left	Left
OK	OK
Right	Right
Down	Down





Original	Replacement	Original	Replacement
 Title List / Disc Menu	 D.Menu / Top		
 Info	 Info / Angle		
 Playlist / Title Menu	 Smart / List		
 Anykey	 Yellow / YouTube / Repeat		
 Subtitle	 Subtitle / EQ		
 TV / VCR	 Display / Media		
 REC	 Rec / Rec Mode		
 Rec Speed	 Setup / OPT /		
 Cancel	 Exit / Cancel / Clear		
 Timer Rec	 Sleep / Timer		
 Copy To DVD	 Red / Netflix / Search		
 Copy To VCR	 Green / APP / Repeat		

Original	Replacement	Original	Replacement





	Original	Replacement	Original	Replacement
	TV Standby/On	Power		
	1	1		
	2	2		
	3	3		
	4	4		
	5	5		
	6	6		
	7	7		
	8	8		
	9	9		
	0	0		
	Vol+	Vol+		
	TV Mute	Mute / Dimmer		
	Prog. +	CH+ / Page+		
	Vol-	Vol-		
	Prog. -	CH- / Page-		

