







 



 



 

 

 

 

 

 

 

 

 





Original	Replacement
	 Mute / Dimmer
	 Power
	 TV/Radio /
	 Shift + 2
	 Shift + TV/Radio / Program
	 Shift + Rec / Rec Mode
	 Shift + Yellow / YouTube /
	 Audio / Lang I/II
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9

Original	Replacement
	 0
	 Guide / EPG / -/-
	 Smart / List
	 Picture / Format
	 Text / Goto
	 Menu / Home
	 Exit / Cancel / Clear
	 Info / Angle
	 Vol+
	 Up
	 CH+ / Page+
	 Left
	 OK
	 Right
	 Vol-
	 Down
	 CH- / Page-




 

 







 

 





 


 


Original	Replacement	Original	Replacement
	Red / Netflix / Search		
	Green / APP / Repeat		
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		
	<< / Tune-		
	Play / Slow		
	>> / Tune+		
	Rec / Rec Mode		
	Shift + Stop /		
	Pause / Step / Freeze		
	Stop / Hold		





Original	Replacement
	 Mute / Dimmer
	 Power
	 TV/Radio /
	 Shift + 2
	 Shift + TV/Radio / Program
	 Shift + Rec / Rec Mode
	 Shift + Yellow / YouTube /
	 Audio / Lang I/II
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9

Original	Replacement
	 0
	 Guide / EPG / -/-
	 Smart / List
	 Picture / Format
	 Text / Goto
	 Menu / Home
	 Exit / Cancel / Clear
	 Info / Angle
	 Vol+
	 Up
	 CH+ / Page+
	 Left
	 OK
	 Right
	 Vol-
	 Down
	 CH- / Page-





 

 

 

 












Original	Replacement	Original	Replacement
C-SET Red/C-Set	NETFLIX SEARCH Red / Netflix / Search		
SV Green/SV	APP REPEAT Green / APP / Repeat		
ZOOM Yellow/Zoom	YouTube REPEAT A-B Yellow / YouTube / Repeat		
MARKER Blue/Marker	Prime Video RANDOM Blue / Prime Video / Random		
<<	TUNE- << / Tune-		
Play	SLOW Play / Slow		
>>	TUNE+ >> / Tune+		
Rec	SHIFT + HOLD Shift + Stop /		
Rec	REC MODE Rec / Rec Mode		
Pause	STEP-FREEZE Pause / Step / Freeze		
Stop	HOLD Stop / Hold		






















































Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 Audio / Lang I/II
	 Picture / Format
	 TV/Radio /
	 Text / Goto
	 Menu / Home
	 Up
	 Info / Angle
	 Left
	 OK

Original	Replacement
	 Right
	 Exit / Cancel / Clear
	 Down
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9





Original	Replacement	Original	Replacement
Power	 Power	Right	 Right
Mute	 Mute / Dimmer	End	 Exit / Cancel / Clear
Play	 Play / Slow	Down	 Down
Pause	 Pause / Step / Freeze	Vol+	 Vol+
Stop	 Stop / Hold	Assist/Card	 Smart / List
Rec	 Rec / Rec Mode	P+	 CH+ / Page+
<<	 << / Tune-	Vol-	 Vol-
>>	 >> / Tune+	P-	 CH- / Page-
Audio	 Audio / Lang I/II	1	 1
PIP	 Picture / Format	2	 2
TV	 TV/Radio /	3	 3
Text/Disc-M	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Up	 Up	6	 6
Info	 Info / Angle	7	 7
Left	 Left	8	 8
OK	 OK	9	 9

Right	 Right
End	 Exit / Cancel / Clear
Down	 Down
Vol+	 Vol+
Assist/Card	 Smart / List
P+	 CH+ / Page+
Vol-	 Vol-
P-	 CH- / Page-
1	 1
2	 2
3	 3
4	 4
5	 5
6	 6
7	 7
8	 8
9	 9





Original	Replacement	Original	Replacement
EPG/DVD-AV	 Guide / EPG / -/--		
0/AV	 0		
Red/C-Set	 Red / Netflix / Search		
Green/SV	 Green / APP / Repeat		
Yellow/Zoom	 Yellow / YouTube / Repeat		
Blue/Marker	 Blue / Prime Video / Random		
Rec	 Shift + Stop /		
Rec Menu	 Shift + Rec / Rec Mode		
Radio	 Shift + TV/Radio / Program		
DVD	 Shift + 2		
- [] / ← AB	 Shift + Yellow / YouTube /		

Original	Replacement

