
















 




 




 
 
 

 









| Original  | Replacement   | Original   | Replacement   |
|---|---|--|---|
|  Power MD      |  Power   |  Up                 |  Up      |
|  Direct Tuning |  Text    |  Down               |  Down    |
|  Dimmer        |  Pre Ch  |  Right              |  Right   |
|  TV            |  TV/R    |  Left               |  Left    |
|  CD            |  Yellow  |  Enter              |  Ok      |
|  DVD           |  Blue    |  Menu               |  D. Menu |
|  Tuner/Band    |  Green   |  Display            |  Info    |
|  Tape          |  Red     |  Top Menu/Disc/Deck |  Menu    |
|  VCR           |  Smart   |  1 MD               |  1       |
|  MD            |  Media   |  2 MD               |  2       |
|  Vol+         |  Vol +  |  3 MD              |  3      |
|  Vol-        |  Vol - |  4 MD             |  4     |
|  Muting      |  Mute  |  5 MD             |  5     |
|  Stop MD     |  Stop  |  6 MD             |  6     |
|  Play MD     |  Play  |  7 MD             |  7     |
|  <</ << MD   |  <<    |  8 MD             |  8     |
|  >>/>>  MD   |  >>    |  9 MD             |  9     |














 



 

 

 

 

 



 
 


 



 
 









 





 

 

 

 



 



 


| Original    | Replacement   |
|-------------|---------------|
| 0 MD        | 0             |
| >10/--- MD  | Guide         |
| Tv/AV       | AV            |
| Stereo      | Dual          |
| Surround    | Options       |
| SFC         | Subt          |
| Test        | Back          |
| Delay       | Format        |
| Level       | 3D            |
| +           | Ch +          |
| -           | Ch -          |
| Power TV    | Shift + Power |
| Tv Vol Up   | Shift + Vol + |
| Tv Vol Down | Shift + Vol - |
| 1 Tv        | Shift + 1     |
| 2 Tv        | Shift + 2     |
| 3 Tv        | Shift + 3     |

| Original   | Replacement   |
|------------|---------------|
| 4 Tv       | Shift + 4     |
| 5 Tv       | Shift + 5     |
| 6 Tv       | Shift + 6     |
| 7 Tv       | Shift + 7     |
| 8 Tv       | Shift + 8     |
| 9 Tv       | Shift + 9     |
| 0 Tv       | Shift + 0     |
| >10/--- Tv | Shift + Guide |





| Original  | Replacement   | Original   | Replacement   |
|---|---|--|---|
|  Power DVD                 |  Power     |  Right    |  Right   |
|  TV                        |  TV/R      |  Left     |  Left    |
|  VCR                       |  Smart     |  Enter    |  Ok      |
|  Tuner/Band                |  Green     |  Stereo   |  Dual    |
|  Tape                      |  Red       |  Surround |  Options |
|  MD                        |  Media     |  SFC      |  Subt    |
|  CD                        |  Yellow    |  Test     |  Back    |
|  DVD                       |  Blue      |  Delay    |  Format  |
|  Play DVD                  |  Play      |  Level    |  3D      |
|  I<</<< DVD                |  <<        |  +        |  Ch +    |
|  Stop DVD                 |  Stop     |  -       |  Ch -   |
|  >>/>>I DVD              |  >>      |  1 DVD  |  1     |
|  Top Menu/Menu/Disc/Deck |  Menu    |  2 DVD  |  2     |
|  Display                 |  Info    |  3 DVD  |  3     |
|  Menu                    |  D. Menu |  4 DVD  |  4     |
|  Up                      |  Up      |  5 DVD  |  5     |
|  Down                    |  Down    |  6 DVD  |  6     |







 


 

 
 
 
 
 

 

 
 

 


 


 







|  | Original    | Replacement | Original | Replacement |
|--|-------------|-------------|----------|-------------|
|  | 7 DVD       |             |          |             |
|  | 8 DVD       |             |          |             |
|  | 9 DVD       |             |          |             |
|  | 0 DVD       |             |          |             |
|  | >10/-/- DVD |             |          |             |
|  | Vol+        |             |          |             |
|  | Vol-        |             |          |             |
|  | Muting      |             |          |             |
|  |             |             |          |             |
|  |             |             |          |             |
|  |             |             |          |             |
|  |             |             |          |             |
|  |             |             |          |             |
|  |             |             |          |             |
|  |             |             |          |             |
|  |             |             |          |             |
|  |             |             |          |             |
|  |             |             |          |             |
|  |             |             |          |             |
|  |             |             |          |             |
|  |             |             |          |             |
|  |             |             |          |             |

 




| Original   | Replacement   |
|--|---|
|  Power CD             |  Power     |
|  TV                   |  TV/R      |
|  VCR                  |  Smart     |
|  CD                   |  Yellow    |
|  DVD                  |  Blue      |
|  Tape                 |  Red       |
|  MD                   |  Media     |
|  Tuner/Band           |  Green     |
|  Stop CD              |  Stop      |
|  I<</<< CD           |  <<       |
|  >>/>>I CD          |  >>      |
|  Play CD            |  Play    |
|  Menu               |  D. Menu |
|  Display            |  Info    |
|  Top Menu/Disc/Deck |  Menu    |
|  Up                 |  Up      |
|  Down               |  Down    |

| Original   | Replacement   |
|--|---|
|  Right        |  Right           |
|  Left         |  Left            |
|  Enter        |  Ok              |
|  Stereo       |  Dual            |
|  Surround     |  Options         |
|  SFC          |  Subt            |
|  Test         |  Back            |
|  Delay        |  Format          |
|  Level        |  3D              |
|  +           |  Ch +           |
|  -          |  Ch -          |
|  Vol+       |  Vol +         |
|  Vol-       |  Vol -         |
|  Muting     |  Mute          |
|  Power Tape |  Shift + Power |
|  Stop Tape  |  Shift + Stop  |
|  Play Tape  |  Shift + Play  |



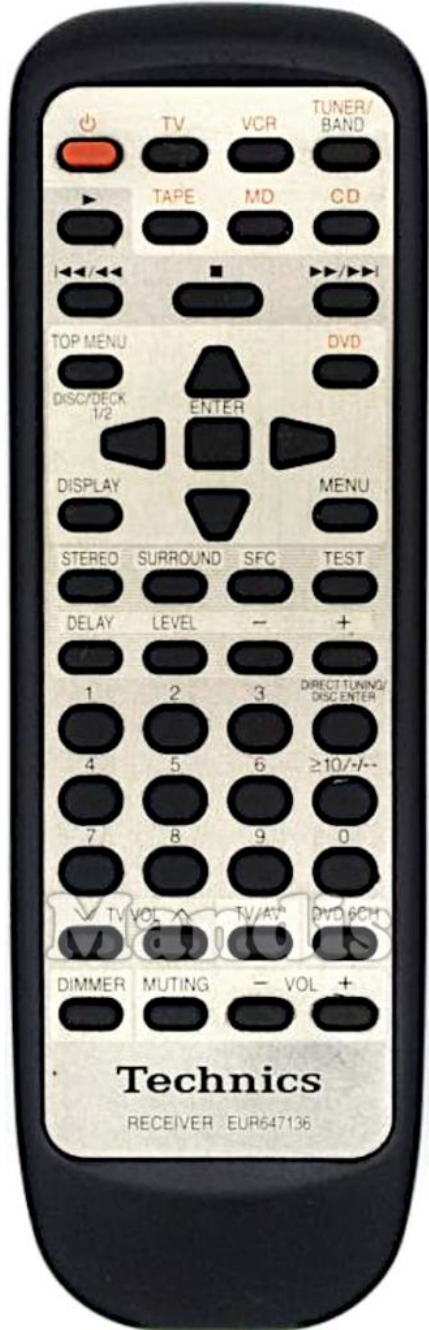


 



 



 

 

 



 




 






 


 












 

 

 





 



 





 


| Original                 | Replacement      |
|--------------------------|------------------|
| I<</<< Tape              | +  Shift + <<    |
| >>/>>I Tape              | +  Shift + >>    |
| Top Menu/Disc/Deck       | +  Shift + Menu  |
| 1 CD-Tape                | 1                |
| 2 CD-Tape                | 2                |
| 3 CD-Tape                | 3                |
| 4 CD-Tape                | 4                |
| 5 CD-Tape                | 5                |
| 6 CD-Tape                | 6                |
| 7 CD-Tape                | 7                |
| 8 CD-Tape                | 8                |
| 9 CD-Tape                | 9                |
| 0 CD-Tape                | 0                |
| >10/-/- CD-Tape          | GUIDE Guide      |
| Direct Tuning/Disc Enter | REPEAT TEXT Text |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |





 
 
 

 

 
 
 
 

 



 


















| Original   | Replacement  | Original   | Replacement   |
|--|--|--|---|
|  Power VCR  |  Power  |  5 VCR                    |  5       |
|  Dimmer     |  Pre Ch |  6 VCR                    |  6       |
|  VCR        |  Smart  |  7 VCR                    |  7       |
|  Tape       |  Red    |  8 VCR                    |  8       |
|  TV         |  TV/R   |  9 VCR                    |  9       |
|  CD         |  Yellow |  0 VCR                    |  0       |
|  DVD        |  Blue   |  >10/-/- VCR              |  Guide   |
|  Tuner/Band |  Green  |  Direct Tuning/Disc Enter |  Text    |
|  MD         |  Media  |  Vol+                     |  Vol +   |
|  Stop       |  Stop   |  Vol-                     |  Vol -   |
|  I<</<<    |  <<    |  Muting                  |  Mute   |
|  >>/>>I   |  >>   |  Up                     |  Up    |
|  Play     |  Play |  Down                   |  Down  |
|  1 VCR    |  1    |  Right                  |  Right |
|  2 VCR    |  2    |  Left                   |  Left  |
|  3 VCR    |  3    |  Enter                  |  Ok    |
|  4 VCR    |  4    |  Top Menu/Disc/Deck     |  Menu  |

1/2





| Original  | Replacement  |
|---|--|
|  Display           |  Info           |
|  Menu              |  D. Menu        |
|  Stereo            |  Dual           |
|  Surround          |  Options        |
|  SFC               |  Subt           |
|  Test              |  Back           |
|  Delay             |  Format         |
|  Level             |  3D             |
|  +                 |  Ch +           |
|  -                 |  Ch -           |
|  Power Tuner/Band |  Shift + Power |
|  1 Tuner/Band    |  Shift + 1    |
|  2 Tuner/Band    |  Shift + 2    |
|  3 Tuner/Band    |  Shift + 3    |
|  4 Tuner/Band    |  Shift + 4    |
|  5 Tuner/Band    |  Shift + 5    |
|  6 Tuner/Band    |  Shift + 6    |

| Original   | Replacement   |
|--|---|
|  7 Tuner/Band |  Shift + 7     |
|  8 Tuner/Band |  Shift + 8     |
|  9 Tuner/Band |  Shift + 9     |
|  0 Tuner/Band |  Shift + 0     |
|  >10/-/-      |  Shift + Guide |

