
 






 



 

 



 

 

 





 








Original	Replacement
 On/Stand-by	 Power
 MP3 Display	 Media
 Clock	 List
 Sleep	 Sleep
 Timer	 AV
 Surround	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide

Original	Replacement
 <</Tuning	 <<
 >>/Tuning Up	 >>
  <</Preset	  <<
 >> /Preset Up	 >>
 Pause	 Pause
 Play	 Play
 Stop	 Stop
 Rec Pause	 Rec
 Vol+	 Vol +
 Vol-	 Vol -
 PTY-TI	 Options
 ASPM	 Subt
 Display	 Info
 Bass+	 Ch +
 Bass-	 Ch -
 Treble+	 Right
 Treble-	 Left





Original	Replacement	Original	Replacement
MEMORY Memory	SEARCH TV/R TV/R		
CLEAR Clear	CLEAR EXIT Exit		
REPEAT Repeat	REPEAT TEXT Text		
RANDOM Random	HOME SMART Smart		
C D CD	D Blue		
TUNER(BAND) Tuner(Band)	B Green		
TAPE Tape	C Yellow		
VIDEO/AUX Video/AUX	A Red		

