 










 


 
 


 
 



 
 


 



 



 

 


 
 


 


 
 


 

 

 



 


 

 


 




Original	Replacement	Original	Replacement
 Power	 Power	 Prog+	 Ch +
 Input	 AV	 Prog-	 Ch -
 1	 1	 Media	 Media
 2	 2	 Exit	 Exit
 3	 3	 Tv/Radio	 TV/R
 4	 4	 Digital/Analog	 Eject
 5	 5	 OK	 Ok
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Sync Menu	 Menu
 [=]/Text	 Text	 Guide	 Guide
 [+]	 Format	 ?/i-Manual	 D. Menu
 Mute	 Mute	 Home	 Smart
 Vol+	 Vol +	 Options	 Options
 Vol-	 Vol -	 Return/Back	 Back





Original	Replacement	Original	Replacement
	[i+]		Info
	SEN		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Rec		Rec
	Pause		Pause
	Stop		Stop
	Play		Play
	>>		>>
	<<		<<
	Title List		List
	Tv Pause		3D
	[...]		Subt
	Audio		Dual
	X/Related Search		Sleep

