

 
 


 

 

 





 
 



 


 
 

 
 




 





 
 



 


 

 


 
 



 

 





 





 






Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit
 Mute	 Mute	 I<	 I<<
 1	 1	 >I	 >>I
 2	 2	 <<	 <<
 3	 3	 >>	 >>
 4	 4	 CH+	 Ch +
 5	 5	 CH-	 Ch -
 6	 6	 Vol+	 Vol +
 7	 7	 Vol-	 Vol -
 8	 8	 Up	 Up
 9	 9	 Down	 Down
 0	 0	 Right	 Right
 Tv/Radio	 TV/R	 Left	 Left
 Zoom	 Eject	 OK	 Ok
 Info	 Info	 FAV	 Pre Ch
 Video	 Smart	 Rec	 Rec
 Menu	 Menu	 Stop	 Stop





Original		Replacement		Original		Replacement	
	Play		Play				
	Pause		Pause				
	Roll		Back				
	File		Media				
	Device		AV				
	Red		Red				
	Yellow		Yellow				
	Blue		Blue				
	Green		Green				
	EPG		Guide				
	Subt.		Subt				
	TTX		Text				
	Audio		Dual				

