 





 




 



 

 

 

 

 









 
 












 



 





 



 

 
 
 










Original	Replacement	Original	Replacement
	Power		Power
	TXT / TV		Text
	Call / [≡i]		Smart
	Mute		Mute
	[≡□]		Stop
	[≡?]		3D
	[≡⇕]		Eject
	[⊖] / [≡X]		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Input		AV
	CH+		Ch +
	CH+		Up
	CH-		Ch -
	CH-		Down
	Vol+		Vol +
	Vol+		Right
	Vol-		Vol -
	Vol-		Left
	Menu		Menu
	Picture		Format
	Music		D. Menu
	Audio I/II		Dual
	Red		Red
	Green		Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Blue		Blue				

