

 
 
 







 

 
 
 

 
 
 

 
 
 

 
 
 

 

 



 
 

 
 
 
 

 



 

 

 
 
 
 
 



 









 
 




Original		Replacement		Original		Replacement	
	Power		Power		Night		Sleep
	Input		AV		Vol+		Vol +
	Power Tv		Shift + Power		Vol-		Vol -
	Input Tv		Shift + AV		Mute		Mute
	Tv Prog+		Shift + Ch +		AMP Menu		Menu
	Tv Prog-		Shift + Ch -		Return		Back
	Display		Info		Up		Up
	SW Vol+		Ch +		Down		Down
	SW Vol-		Ch -		Right		Right
	Clear Audio+		1		Left		Left
	Standard		2		OK		Ok
	Movie		3		I<<		I<<
	Game		4		Pause		Pause
	Music		5		>>I		>>I
	P.Audio		6		<<		<<
	Sports		7		Play		Play
	Voice		Smart		>>		>>





Original	Replacement	Original	Replacement
 Stop	 Stop		
 Pairing	 Media		

Original	Replacement

