



Original	Replacement
Standby	Power
DTV/VCR	AV
Rec List	List
Slow	Media
Play	Play
Pause	Pause
Stop	Stop
>>	>>
<<	<<
Record	Rec
Menu	Menu
Exit	Exit
EPG	Guide
Favorite	Pre Ch
Up	Up
Down	Down
Right	Right

Original	Replacement
Left	Left
OK	Ok
CH+	Ch +
CH-	Ch -
Vol+	Vol +
Vol-	Vol -
Goto	Options
Recall	Back
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9





Original	Replacement	Original	Replacement
 0	 0		
 PVR Info	 Format		
 Info	 Info		
 Subtitle	 Subt		
 Text	 Text		
 Tv/Radio	 TV/R		
 Lang	 Dual		
 Audio	 Shift + Dual		
 Mute	 Mute		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

