





































 





 



















 










| Original | | Replacement | | Original | | Replacement | |
|---|---------------|---|--------------------------|---|----------|---|---------------------------|
|  | Standby |  | Power |  | Canc |  | Exit / Cancel / Clear |
|  | Equalizzatore |  | Shift + Sound / Title |  | 0/10 |  | 0 |
|  | Surround |  | Shift + Eject / Surround |  | 10+ |  | Guide / EPG / -/- |
|  | Eject |  | Eject / Surround |  | Titolo |  | Sound / Title |
|  | Audio |  | Audio / Lang I/II |  | Up |  | Up |
|  | 1 |  | 1 |  | Menu |  | Menu / Home |
|  | 2 |  | 2 |  | Left |  | Left |
|  | 3 |  | 3 |  | OK |  | OK |
|  | Angle |  | Info / Angle |  | Right |  | Right |
|  | 4 |  | 4 |  | Programm |  | TV/Radio / |
|  | 5 |  | 5 |  | Down |  | Down |
|  | 6 |  | 6 |  | Display |  | Display / Media |
|  | Sottotitoli |  | Subtitle / EQ |  | PAL/NTSC |  | D.Menu / Top |
|  | 7 |  | 7 |  | Setup |  | Setup / OPT / |
|  | 8 |  | 8 |  | Digest |  | Shift + D.Menu / Top Menu |
|  | 9 |  | 9 |  | Vol+ |  | Vol+ |
|  | Ricerca |  | Red / Netflix / Search |  | Mute |  | Mute / Dimmer |





| | Original | Replacement | Original | Replacement |
|---|-------------|---|----------|-------------|
|  | Mark |  Fav / Marker / PC | | |
|  | Zoom |  Zoom / Size | | |
|  | Vol- |  Vol- | | |
|  | A-B |  Yellow / YouTube / Repeat | | |
|  | Ripeti |  Back / Return | | |
|  | Slow |  Shift + Play / | | |
|  | <</F.RWD |  << / Tune- | | |
|  | F.FWD/>> |  >> / Tune+ | | |
|  | I<< / Skip- |  I<< / Preset- | | |
|  | >>I / Skip+ |  >>I / Preset+ | | |
|  | Stop |  Stop / Hold | | |
|  | Pause/Step |  Pause / Step / Freeze | | |
|  | Play |  Play / Slow | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

