


 













 

























 



 









 

 

 

 



 




Original		Replacement		Original		Replacement	
	Power		Power		Info		Info
	Sleep		Sleep		Input		AV
	Mute		Mute		Up / CH+		Up
	1		1		Up / CH+		Ch +
	2		2		Down / CH-		Down
	3		3		Down / CH-		Ch -
	4		4		Right / Vol+ / Enter		Right
	5		5		Left / Vol-		Left
	6		6		Left / Vol-		Vol -
	7		7		Right / Vol+ / Enter		Vol +
	8		8		Right / Vol+ / Enter		Ok
	9		9		Menu		Menu
	0		0		Page+		>>
	-/--		Guide		Page-		<<
	Recall		Back		Display		Shift + Info
	Audio		Dual		Exit		Exit
	P.M.		Smart		Red		Red





Original		Replacement	
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Size		Eject
	Stop		Stop
	Reveal		TV/R
	Index		Options
	4:3 / 16:9		Format
	C.Lock		Media
	Sub.PG		Subt
	On/Mix/Off		Text

Original	Replacement

