



 




 







 


 


 



 





 
 


 

 



 





 






















	Original	Replacement		Original	Replacement
	 Power On	 Power		 Vol-	 Vol -
	 Power Off	 Shift + Power		 Mute	 Mute
	 1	 1		 FRQ Direct	 Play
	 2	 2		 Tune	 I<<
	 3	 3		 Preset	 >>I
	 4	 4		 FM Mono	 Pause
	 5	 5		 Band	 Stop
	 6	 6		 Center	 Yellow
	 7	 7		 Swoofers	 Red
	 8	 8		 Surround	 Green
	 9	 9		 Menu	 Menu
	 0	 0		 Up	 Up
	 Ten/+10	 Guide		 Down	 Down
	 Memory	 Pre Ch		 +/Forward	 Right
	 CH+	 Ch +		 -/Back	 Left
	 CH-	 Ch -		 Enter	 Ok
	 Vol+	 Vol +		 CD	 Shift + 1





Original	Replacement	Original	Replacement
 Tun	 Shift + 2	 7 CH	 Subt
 Tape	 Shift + 3	 Display	 Info
 EXT	 Shift + 4	 Tape 2	 Exit
 V1/DVD	 Shift + 5	 Phono	 Back
 V2	 Shift + 6	 Tone	 Text
 V3	 Shift + 7	 D-SLT	 D. Menu
 V4	 Shift + 8	 Scan	 Shift + Play
 V5	 Shift + 9	 PTY	 <<
 EQ	 Smart	 P-Tun	 >>
 DYN	 Media	 TP	 Shift + Pause
 Rec	 Rec	 TA	 Shift + Stop
 Zone	 Shift + Smart	 Aspect	 Format
 Sur+	 Shift + Media	 Disp	 Shift + Info
 2 CH	 List	 PIP	 Sleep
 PL C	 Options	 POP	 TV/R
 PL M	 3D	 Output	 AV
 5 CH	 Dual	 Power	 Blue













Original		Replacement		Original		Replacement	
	Power On		Power		Play		Play
	Power Off		Shift + Power		I<<		I<<
	1		1		>>I		>>I
	2		2		Pause		Pause
	3		3		Stop		Stop
	4		4		Menu		Menu
	5		5		Up		Up
	6		6		OSD		Back
	7		7		Down		Down
	8		8		-/Back		Left
	9		9		-/Back		<<
	0		0		+/Forward		Right
	Ten (+10)		Guide		+/Forward		>>
	Clear (X)		Exit		Enter		Ok
	Vol+		Vol +		Search-		Ch -
	Vol-		Vol -		Search+		Ch +
	Mute		Mute		Random (DYN)		TV/R







 














 

 





 










 



 



 


 




 
 


 
 

 

 
 
 

 


	Original	Replacement
	PAL (Rec)	 Format
	HD Mode	 3D
	DIM (SUR+)	 AV
	Prog (2CH)	 Sleep
	Screen (PL C)	 Smart
	Title (PL M)	 Media
	Prog-Scan	 Options
	Open (7CH)	 Eject
	Display	 Info
	Audio	 Dual
	Angle	 List
	Subtitle	 Subt
	Zoom	 Shift + Eject
	Resume	 Shift + Right
	Repeat	 Text
	A-B	 D. Menu
	Slow	 Shift + Play

	Original	Replacement
	Goto	 Shift + Left
	Power	 Blue





Original		Replacement		Original		Replacement	
	Power On		Power		I<<		I<<
	Power Off		Shift + Power		>>I		>>I
	1		1		Pause		Pause
	2		2		Stop		Stop
	3		3		Open (ENT)		Ok
	4		4		Open (ENT)		Eject
	5		5		Search-		Ch -
	6		6		Search+		Ch +
	7		7		Disc 1		Shift + 1
	8		8		Disc 2		Shift + 2
	9		9		Disc 3		Shift + 3
	0		0		Disc 4		Shift + 4
	TEN (+10)		Guide		Disc 5		Shift + 5
	Vol+		Vol +		Program (2CH)		Sleep
	Vol-		Vol -		Random (PL C)		TV/R
	Mute		Mute		Repeat (PL M)		Text
	Play		Play		Disc+ (7CH)		>>



