

































 

 





 

 






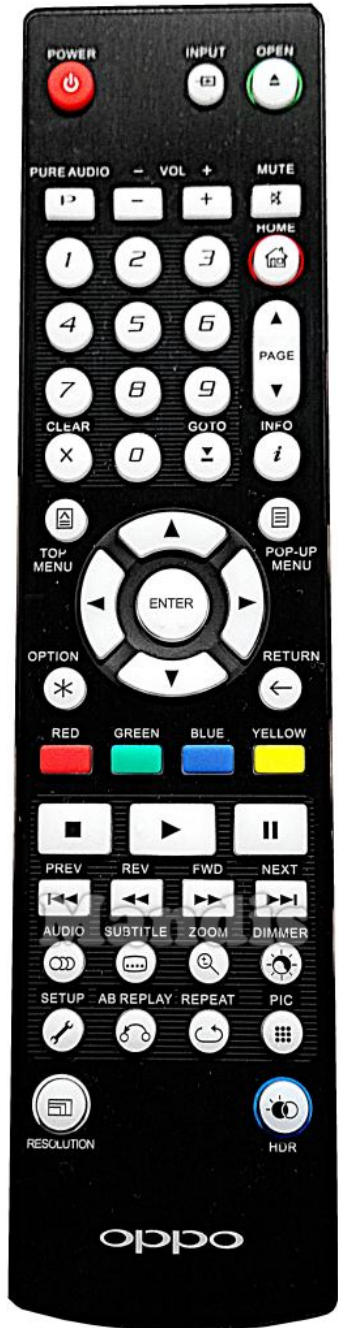 


Original	Replacement
 Power	 Power
 Input	 AV / Input / RDS
 Open	 Eject / Surround
 Pure Audio	 Sound / Title
 Vol-	 Vol-
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 Home	 Menu / Home
 4	 4
 5	 5
 6	 6
 Page+	 CH+ / Page+
 7	 7
 8	 8

Original	Replacement
 9	 9
 Page-	 CH- / Page-
 Clear	 Exit / Cancel / Clear
 0	 0
 Goto	 Text / Goto
 Info	 Info / Angle
 Top Menu	 D.Menu / Top
 Up	 Up
 Pop-Up Menu	 Shift + Menu /
 Left	 Left
 Enter	 OK
 Right	 Right
 Option	 Shift + Setup / OPT / Tools
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Replacement
Blue	Blue / Prime Video / Random
Yellow	Yellow / YouTube / Repeat
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
I<<	I<< / Preset-
<<	<< / Tune-
>>	>> / Tune+
>>I	>>I / Preset+
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Zoom	Zoom / Size
Dimmer	Shift + Mute / Dimmer
Setup	Setup / OPT /
AB Replay	Shift + Yellow / YouTube /
Repeat	Shift + Green / APP /
Pic	Picture / Format

Original	Replacement
Resolution	Guide / EPG / -/--
Light	Fav / Marker / PC

