 




















 














Original	Replacement
 Random	 Blue / Prime Video / Random
 Display	 Display / Media
 Prog/Direct	 TV/Radio /
 Prog/Direct	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/--
 Vol+	 Vol+
 Call	 Fav / Marker / PC

Original	Replacement
 Vol-	 Vol-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Pitch+	 CH+ / Page+
 Pitch-	 CH- / Page-

