







 

 





 

 

 



 
 


 

 




 


















 



 
 











 













 









Original	Replacement
	 Power
	 TV/Radio /
	 Mute / Dimmer
	 Text / Goto
	 Subtitle / EQ
	 Audio / Lang I/II
	 D.Menu / Top
	 Sleep / Timer
	 Shift + Pause / Step /
	 Zoom / Size
	 Guide / EPG / -/--
	 Info / Angle
	 Back / Return
	 Display / Media
	 Menu / Home
	 Exit / Cancel / Clear
	 Vol+

Original	Replacement
	 Left
	 CH+ / Page+
	 Up
	 Shift + CH+ /
	 Vol-
	 OK
	 Right
	 Shift + CH- /
	 CH- / Page-
	 Down
	 Smart / List
	 Play / Slow
	 Stop / Hold
	 << / Tune-
	 Pause / Step / Freeze
	 >> / Tune+
	 >>  / Preset+





Original	Replacement
 Rec	 Rec / Rec Mode
 I>/Slow	 Shift + Play /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 V-Format	 Picture / Format
 0	 0

Original	Replacement
 Wide	 Setup / OPT /

