



 








Original		Replacement		Original		Replacement	
	Power		Power		5		Shift + Eco / Aspect
	Search		Source		6		Shift + 3D / Invert
	Computer		Comp / Video		7		Shift + Blank / Mute
	S-Video		Eco / Aspect		8		Shift + Auto
	Video		Volt / Focus		9		Shift + Freeze / Timer
	USB Display		Shift + Source		0		Shift + Comp / Video
	HDMI		Shift + Up		?/Help		Help / Info
	Slideshow		3D / Invert		Page Down		Shift + Vol - / Page -
	A/V Mute		Blank / Mute		Page Up		Shift + Vol + / Page +
	Freeze		Freeze / Timer		E-Zoom-		- / Stop
	Auto		Auto		E-Zoom+		+ / Play
	Aspect		Mode		Vol-		Vol - / Page -
	Color Mode		Shift + Mode		Vol+		Vol + / Page +
	1		Shift + + / Play		Menu		Menu
	2		Shift + Volt / Focus		Esc		Shift + Power
	3		Shift + - / Stop		Up		Up
	4		Shift + Help / Info		Down		Down





	Original	Replacement		Original	Replacement
	Right	 Right			
	Left	 Left			
	Enter	 Enter			
		 +  Shift + Right			
		 +  Shift + Left			

