 

 

 




 

 

 


 


 
 
 
 









 
 


 
 


 
 


 
 





 
 
 

 


 
 
 
 


 
 






Original	Replacement	Original	Replacement
 Power	 Power	 Dimmer	 Shift + Info
 Open/Close	 Eject	 YouTube	 Media
 1	 1	 Netflix	 Shift + Smart
 2	 2	 Vidu	 Shift + Media
 3	 3	 Info	 Info
 4	 4	 Home	 Smart
 5	 5	 Power AMP	 Shift + Power
 6	 6	 Source Up	 Ch +
 7	 7	 Source Down	 Ch -
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 Mute	 Mute
 +10	 Guide	 Top Menu	 Menu
 Search	 TV/R	 Pop Up Menu	 D. Menu
 Prog/Direct	 Sleep	 Return	 Back
 Clear	 Exit	 Setup	 Shift + Options
 Call	 Pre Ch	 Up	 Up





Original	Replacement

Original	Replacement

