



Original	Replacement
Standby	Power
Open/Close	Eject
Subtitle	Subt
Audio	Dual
Angle	3D
Time	D. Menu
Setup	Options
Stop	Stop
Play	Play
Source	AV
Record	Rec
Pause	Pause
FBW	<<
FFW	>>
Prev	I<<
Slow	Shift + Play
Next	>>I

Original	Replacement
DV	Smart
Return	Back
ADD/Clear	Exit
GOTO	Pre Ch
Up	Up
Down	Down
Edit	Red
Left	Left
Right	Right
Enter	Ok
Discfunc	Guide
Shuffle	TV/R
Program	Sleep
Repeat	Text
Zoom	Shift + Eject
USB	Media
Timer	Shift + AV





Original	Replacement
Channel-	Ch -
Channel+	Ch +
NTSC/PAL	Format
Display	Info
Volume-	Vol -
Volume+	Vol +
Title	List
Menu	Menu
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Replacement
9	9
0	0
A-B	+  Shift + Text

