














Original	Replacement	Original	Replacement
 Power	 Power	 Play	 OK
 PBC	 D.Menu / Top	 Right	 Right
 Display	 Display / Media	 Slow	 Shift + Play /
 Eject	 Eject / Surround	 Down	 Down
 Subtitle	 Subtitle / EQ	 Stop	 Stop / Hold
 Search	 Red / Netflix / Search	 I<< / Preset-	 I<< / Preset-
 Angle	 Info / Angle	 Next >>I	 >>I / Preset+
 Language	 Audio / Lang I/II	 << / F.R	 << / Tune-
 Setup	 Setup / OPT /	 F.F >>	 >> / Tune+
 Title	 Sound / Title	 1/All	 Green / APP / Repeat
 Menu	 Menu / Home	 A-B	 Yellow / YouTube / Repeat
 Zoom	 Zoom / Size	 Vol-	 Vol-
 Resume	 Back / Return	 Vol+	 Vol+
 Up	 Up	 1	 1
 Pause	 Pause / Step / Freeze	 2	 2
 Left	 Left	 3	 3
 Play	 Play / Slow	 Mute	 Mute / Dimmer



