


 
 







Original	Replacement	Original	Replacement
	On		Power
	Mute		Mute / Dimmer
	T.Tone		Sound / Title
	Audio		Audio / Lang I/II
	EQ		Subtitle / EQ
	BD		Picture / Format
	A/D		Zoom / Size
	Sleep		Sleep / Timer
	Top		D.Menu / Top
	Setup		Setup / OPT /
	Auto		Text / Goto
	LIP Sync		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Volume+		Vol+
	GAME		Smart / List
	CH+		CH+ / Page+
	Volume-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	AUX1		1
	DVD		2
	CD		3
	VCR		4
	TUNE		6
	Standby		Shift + Power
	Dimmer		Shift + Mute / Dimmer
	Surr Mode		Shift + Sound / Title































 







 

 



 

 

























Original		Replacement	
	Stereo	 + 	Shift + Audio / Lang I/II
	Night	 + 	Shift + Sleep / Timer
	Input Up	 + 	Shift + Up
	CH Sel	 + 	Shift + OK
	Input Down	 + 	Shift + Down
	Bass+	 + 	Shift + Vol+
	DSS	 + 	Shift + Smart / List
	Treble+	 + 	Shift + CH+ /
	Bass-	 + 	Shift + Vol-
	HT EQ	 + 	Shift + Display / Media
	Treble-	 + 	Shift + CH- /
	AUX2	 + 	Shift + 2

Original		Replacement	





Original	Replacement	Original	Replacement
	Power		Power
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Volume+		Vol+
	Display		Display / Media
	Audio		Audio / Lang I/II
	Volume-		Vol-
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Memo		Smart / List
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	CH-		CH- / Page-
	CH+		CH+ / Page+
	1		1
	2		2
	3		3
	Repeat		Green / APP / Repeat
	4		4
	5		5
	6		6
	Random		Blue / Prime Video / Random
	7		7
	8		8






























Original	Replacement	Original	Replacement
	9		9
	CLR		Exit / Cancel / Clear
	0		0
	+10		Guide / EPG / -/--





Original	Replacement	Original	Replacement
Power		Power	
Mute		Mute / Dimmer	
Tune-		<< / Tune-	
Tune+		>> / Tune+	
Preset-		<< / Preset-	
Preset+		>> / Preset+	
Band		Sound / Title	
PTY		Picture / Format	
T.Mode		D.Menu / Top	
Menu		Menu / Home	
Info		Info / Angle	
Enter		OK	
Volume+		Vol+	
Memo		Smart / List	
Volume-		Vol-	
Display		Display / Media	
1		1	

Original	Replacement	Original	Replacement
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	

