



Original	Replacement
Power On	Power
Standby	Shift + Power
AVR	Smart / List
Dock	Shift + 4
CD	Shift + 3
AUX	Shift + 7
BD	Shift + 2
TV	Shift + 1
SAT	Shift + 0
CBL	Shift + 5
Input	AV / Input / RDS
Vol Down	Shift + Vol-
Vol Up	Shift + Vol+
RDM/Room2	Exit / Cancel / Clear
CH/Album Up	CH+ / Page+
Mute	Mute / Dimmer
Volume+	Vol+

Original	Replacement
CH/Album Down	CH- / Page-
TV/CH Level	Info / Angle
Volume-	Vol-
</Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<</Tune-	<< / Tune-
>>/Tune+	>> / Tune+
I<</Preset-	I<< / Preset-
>>I/Preset+	>>I / Preset+
Test/Disc Menu	D.Menu / Top
Up	Up
Setup/Home	Menu / Home
Setup/Home	Setup / OPT /
< Sel	Left
Enter	OK
Sel >	Right





Original	Replacement
Display	Display / Media
Down/Search	Down
Dimmer/Return	Back / Return
Dimmer/Return	Shift + Mute / Dimmer
Audio	Audio / Lang I/II
< Surround/Play List	Shift + Left
Surround/Play List >	Shift + Right
Stereo/Play M	Sound / Title
1 / Tuner	1
2 / CD	2
3 / F.Aux	3
Sleep	Sleep / Timer
4 / Tape	4
5 / BT In	5
6 / Video 1	6
7 / Video 2	7
8 / Video 3	8

Original	Replacement
9	9
0	0
10	Guide / EPG / -/--
Ext In	Fav / Marker / PC














 





















 



Original	Replacement
Power On	Power
Standby	Shift + Power
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Test/Disc Menu	D.Menu / Top
Up	Up
Setup/Home	Setup / OPT /
Setup/Home	Menu / Home
Left	Left
Enter	OK
Right	Right
Display	Display / Media
Down	Down

Original	Replacement
Dimmer/Return	Back / Return
Dimmer/Return	Mute / Dimmer
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0





	Original	Replacement	Original	Replacement
	CD	 +  Shift + 3		
	Pause	 Pause / Step / Freeze		
	Play	 Play / Slow		
	Stop	 Stop / Hold		
	>>	 >>  / Preset+		
	<<	  << / Preset-		
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		







Original		Replacement		Original		Replacement	
	Power On		Power		Audio		Audio / Lang I/II
	Standby		Shift + Power		< Surround/Play List		Left
	RDM/Room2		Exit / Cancel / Clear		Surround/Play List >		Right
	CH/Album Up		CH+ / Page+		Stereo/Play M		Sound / Title
	CH/Album Down		CH- / Page-		Sleep / Dock M.		Sleep / Timer
	Pause		Pause / Step / Freeze				
	Play		Play / Slow				
	Stop		Stop / Hold				
	<<		<< / Tune-				
	>>		>> / Tune+				
	>>		>>  / Preset+				
	<<		<< / Preset-				
	Test/Disc Menu		D.Menu / Top				
	Up		Up				
	Enter		OK				
	Display		Display / Media				
	Down		Down				

