





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Off Timer	 Sleep / Timer
 Guide	 Guide / EPG / -/--
 Up	 Up
 Tv/AV	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [=]/Text	 Text / Goto

Original	Replacement
 [=◇]/F.P.	 Smart / List
 [=i]/Index	 Display / Media
 [=+]/Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 C	 Back / Return
 0/VCR	 0
 0/VCR	 Shift + 4
 i	 Info / Angle
 CH+	 CH+ / Page+




 
















Original		Replacement		Original	Replacement
	Vol+		Vol+		
	CH-		CH- / Page-		
	Vol-		Vol-		
	[+]/Aspect		Picture / Format		
	N		D.Menu / Top		
	Power VCR		Shift + Power		
	Rec VCR		Rec / Rec Mode		
	Programme Down		Shift + CH- /		
	Programme Up		Shift + CH+ /		
	<< VCR		<< / Tune-		
	>> VCR		>> / Tune+		
	Stop VCR		Stop / Hold		
	Pause/Step VCR		Pause / Step / Freeze		
	Play VCR		Play / Slow		





Original	Replacement	Original	Replacement
 Power DVD	 Power		
 Rec DVD	 Rec / Rec Mode		
 Programme Down	 CH- / Page-		
 Programme Up	 CH+ / Page+		
 I<< DVD	 I<< / Preset-		
 >>I DVD	 >>I / Preset+		
 Stop DVD	 Stop / Hold		
 Pause/Step DVD	 Pause / Step / Freeze		
 Play DVD	 Play / Slow		

