

 





 





















 


 












 

 







 















| Original | Replacement | Original | Replacement |
|--|---|---|---|
|  Standby |  Power |  Audio |  Audio / Lang I/II |
|  DTV/VCR |  AV / Input / RDS |  0 |  0 |
|  EPG |  Guide / EPG / /-- |  Game |  Display / Media |
|  Favorite |  Fav / Marker / PC |  Text |  Text / Goto |
|  Info |  Info / Angle |  TV/Radio |  TV/Radio / |
|  Mute |  Mute / Dimmer |  Play |  Play / Slow |
|  1 |  1 |  Pause |  Pause / Step / Freeze |
|  2 |  2 |  Stop |  Stop / Hold |
|  3 |  3 |  Zoom |  Zoom / Size |
|  USB |  Shift + 8 |  Prev |  I<< / Preset- |
|  4 |  4 |  Next |  >>I / Preset+ |
|  5 |  5 |  Rev |  << / Tune- |
|  6 |  6 |  Fwd |  >> / Tune+ |
|  Sub-T |  Subtitle / EQ |  Menu |  Menu / Home |
|  7 |  7 |  Up / CH+ |  Up |
|  8 |  8 |  Up / CH+ |  CH+ / Page+ |
|  9 |  9 |  Exit/Recall |  Exit / Cancel / Clear |





| Original | Replacement | Original | Replacement |
|--|---|----------|-------------|
|  Exit/Recall |  Back / Return | | |
|  Left / Vol- |  Left | | |
|  Left / Vol- |  Vol- | | |
|  OK |  OK | | |
|  Right / Vol+ |  Vol+ | | |
|  Right / Vol+ |  Right | | |
|  Down / CH- |  CH- / Page- | | |
|  Down / CH- |  Down | | |
|  Red |  Red / Netflix / Search | | |
|  Green |  Green / APP / Repeat | | |
|  Yellow |  Yellow / YouTube / Repeat | | |
|  Blue |  Blue / Prime Video / Random | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

