


 




Original	Replacement
 Power On	 Power
 Power Off	 Shift + Power
 Zone Device On	 Smart
 Zone Device Off	 Shift + Smart
 Net/USB	 Shift + 1
 iPod	 Shift + 2
 DVD	 Shift + 3
 BD	 Shift + 4
 Tuner/DTU	 Shift + 5
 Dock	 Shift + 6
 SAT TU	 Shift + 7
 SAT/CBL	 Shift + 8
 Game	 Shift + 9
 V.AUX	 Shift + Guide
 Phono	 Shift + 0
 CD	 Shift + Pre Ch
 DVR	 Blue

Original	Replacement
 TV	 Shift + Media
 Monitor Select	 Media
 Quick Select 1	 Red
 Quick Select 2 (SAT/CBL)	 Green
 Quick Select 3 (Dock)	 Yellow
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Source Select	 AV
 Menu	 Menu
 CH Level/Top	 Info
 Search/Setup	 Options
 Return	 Back
 Up	 Up
 Down	 Down



 
 
 










 
 
 




Original	Replacement	Original	Replacement
	Right		Right
	Left		Left
	Enter		Ok
	<</Band		<<
	Play		Play
	>>/Mode		>>
	I<</Tuning-		I<<
	Pause		Pause
	Stop		Stop
	>>I/Tuning+		>>I
	Multeq		Subt
	Dyn EQ/Vol		Text
	A-DSX		TV/R
	Restorer		Exit
	Standard		Dual
	D/ST		Format
	Simulation		3D
	Pure		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10/Memory		Guide
	Shift/Link Menu		D. Menu
	Power Tv	 + 	Shift + TV/R
	Input Tv	 + 	Shift + AV
	Sleep		Sleep
	Party		List








Original	Replacement
 Power On	 Power
 Power Off	 Shift + Power
 Zone Device On	 Smart
 Zone Device Off	 Shift + Smart
 Net/USB	 Shift + 1
 iPod	 Shift + 2
 DVD	 Shift + 3
 BD	 Shift + 4
 Tuner/DTU	 Shift + 5
 Dock	 Shift + 6
 SAT TU	 Shift + 7
 SAT/CBL	 Shift + 8
 Game	 Shift + 9
 V.AUX	 Shift + Guide
 Phono	 Shift + 0
 CD	 Pre Ch
 DVR	 Blue

Original	Replacement
 TV	 Media
 Quick Select 1	 Red
 Quick Select 2 (SAT/CBL)	 Green
 Quick Select 3 (Dock)	 Yellow
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Menu	 Menu
 CH Level/Top	 Info
 Search/Setup	 Options
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left






 

 
 











 
 

 
 




Original	Replacement
 Enter	 Ok
 <</Band	 <<
 Play	 Play
 >>/Mode	 >>
 I<</Tuning-	 I<<
 Pause	 Pause
 Stop	 Stop
 >>I/Tuning+	 >>I
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 +10/Memory	 Guide
 Shift/Link Menu	 D. Menu
 Power Tv	 TV/R
 Input TV	 AV
 Sleep	 Sleep
 Party	 List




 



 




 

 

 
 


 





 


 




Original	Replacement
 Power On	 Power
 Power Off	 Shift + Power
 Zone Device On	 Smart
 Zone Device Off	 Shift + Smart
 Net/USB	 Shift + 1
 iPod	 Shift + 2
 DVD	 Shift + 3
 BD	 Shift + 4
 Tuner/DTU	 Shift + 5
 Dock	 Shift + 6
 SAT TU	 Shift + 7
 SAT/CBL	 Shift + 8
 Game	 Shift + 9
 V.AUX	 Shift + Guide
 Phono	 Shift + 0
 CD	 Pre Ch
 DVR	 Blue

Original	Replacement
 TV	 Media
 Quick Select 1	 Red
 Quick Select 2 (SAT/CBL)	 Green
 Quick Select 3 (Dock)	 Yellow
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Menu	 Menu
 CH Level/Top	 Info
 Search/Setup	 Options
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left




 

 
 

 











 

















Original	Replacement	Original	Replacement
	Enter		Ok
	<</Band		<<
	Play		Play
	>>/Mode		>>
	I<</Tuning-		I<<
	Pause		Pause
	Stop		Stop
	>>I/Tuning+		>>I
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10/Memory		Guide
	Shift/Link Menu		D. Menu
	Power Tv		TV/R
	Input Tv		AV
	Party		List
	Sleep		Sleep




 
 




 


 



 

 




 
 

 
 
 

 
 




Original	Replacement
 Power On	 Power
 Power Off	 Shift + Power
 Zone Device On	 Smart
 Zone Device Off	 Shift + Smart
 NET/USB	 Shift + 1
 iPod	 Shift + 2
 DVD	 Shift + 3
 BD	 Shift + 4
 Tuner/DTU	 Shift + 5
 Dock	 Shift + 6
 SAT TU	 Shift + 7
 SAT/CBL	 Shift + 8
 Game	 Shift + 9
 V.AUX	 Shift + Guide
 Phono	 Shift + 0
 CD	 Pre Ch
 DVR	 Blue

Original	Replacement
 TV	 Media
 Quick Select 1	 Red
 Quick Select 2 (SAT/CBL)	 Green
 Quick Select 3 (Dock)	 Yellow
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Search/Setup	 Options
 <</Band	 <<
 Play	 Play
 >>/Mode	 >>
 I<</Tuning-	 I<<
 Pause	 Pause
 Stop	 Stop
 >>I/Tuning+	 >>I





Original		Replacement		Original		Replacement	
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	+10/Memory		Guide				
	Power Tv		TV/R				
	Shift/Link Menu		D. Menu				
	Input Tv		AV				
	Sleep		Sleep				
	Party		List				

