

 

 

 

 
 
 

 

 
 
 


 

 





 

 







 


Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [i+]	 INFO Info
 [=]	 REPEAT TEXT Text
 You Tube	 SHIFT + APP MEDIA Shift + Media
 Netflix	 SHIFT + HOME SMART Shift + Smart
 prime video	 APP MEDIA Media
 Disney+	 E-MANUAL D.MENU D. Menu

Original	Replacement
 Red	 A Red
 Green	 B Green
 Yellow	 C Yellow
 Blue	 D Blue
 Guide	 GUIDE Guide
 Source	 TIMER AV AV
 Micro	 ECO 3D 3D
 Rec List	 SETTINGS OPT Options
 *	 TOP MENU MENU Menu
 Back	 RETURN BACK Back
 TV	 SEARCH TV/R TV/R
 Home	 HOME SMART Smart
 Up	 Up Up
 Down	 Down Down
 Right	 Right Right
 Left	 Left Left
 OK	 OK Ok





	Original	Replacement	Original	Replacement
	Vol+	 Vol +		
	Vol-	 Vol -		
	Mute	 Mute		
	CH+	 Ch +		
	Recall	 Pre Ch		
	CH-	 Ch -		
	Audio	 Dual		
	[...]	 Subt		
	Help	 Format		
	<<	 <<		
	Play	 Play		
	>>	 >>		
	Rec	 Rec		
	Pause	 Pause		
	Exit	 Exit		

