





 

 
 


 

 


 






 
 

 
 





 
 
 


 

 













 

 

 



 

 






Original	Replacement
 Standby	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back
 List	 List
 MTS/I/II	 Dual
 Aspect	 3D
 Display	 Info

Original	Replacement
 PMode	 Format
 SMode	 Shift + Dual
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK/Enter	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Source	 AV
 Sleep	 Sleep
 Auto	 Options
 CH+	 Ch +
 CH-	 Ch -
 Red	 Red





Original		Replacement		Original		Replacement	
	Green		Green		CC		Subt
	Yellow		Yellow		Tv/Radio		TV/R
	Blue		Blue		Rec		Rec
	USB		Media				
	FAV		Pre Ch				
	FAV+		Shift + Ch +				
	FAV-		Shift + Ch -				
	Repeat		Text				
	Stop		Stop				
	Pause		Pause				
	Play		Play				
	A-B		D. Menu				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	EPG		Guide				

