





 

 
 
 

 
 
 

 



 

 
 














Original	Replacement
 Power	 Power
 i	 DISPLAY INFO
 TV / Rad	 SEARCH TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 FAV PRE-CH
 Guide	 GUIDE
 V+ V	 + VOL
 V- V	 - VOL

Original	Replacement
 Mute	 Mute
 P+ P	 + CH
 P- P	 - CH
 BEIN	 HOME SMART
 Back	 RETURN BACK
 Exit	 CLEAR EXIT
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Red / Lang	 Red
 Green / .:	 Green
 Yellow	 Yellow
 Blue	 Blue

