






 








 
 




















Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Prog+	 CH+ / Page+
 Prog-	 CH- / Page-
 Input Select	 AV / Input / RDS
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ

Original	Replacement
 Tv/DVD	 TV/Radio /
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Chapter Mark	 Yellow / YouTube / Repeat
 Chapter Erase	 Blue / Prime Video / Random
 System Menu	 Shift + Menu /
 Title List	 Red / Netflix / Search
 Timer	 Sleep / Timer
 Display	 Display / Media
 Timer List	 Green / APP / Repeat
 Return	 Back / Return
 Options	 Setup / OPT /
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK





Original	Replacement
I<<	I<< / Preset-
←	Guide / EPG / -/-
→	Fav / Marker / PC
>>I	>>I / Preset+
<</II/<I	<< / Tune-
Play	Play / Slow
>>/II>/I>	>> / Tune+
Time/Text	Text / Goto
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Rec	Rec / Rec Mode
Rec Stop	Shift + Stop /
Synchro Rec	Zoom / Size
Rec Mode	Shift + Rec / Rec Mode
Power Tv	Shift + Power
Source Tv	Shift + AV / Input / RDS
Prog+ Tv	Shift + CH+ /

Original	Replacement
Prog- Tv	Shift + CH- /
Vol+ Tv	Vol+
Vol- Tv	Vol-

