






 











 
 


Original	Replacement
 Power	 Power
 Input	 AV / Input / RDS
 Mobile	 Display / Media
 Internet Radio	 TV/Radio /
 Songbird	 Setup / OPT /
 Right	 Right
 Left	 Left
 Clock	 Sleep / Timer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer

Original	Replacement

