







 









 





















































Original	Replacement
	 Power
	 Red / Netflix / Search
	 Mute / Dimmer
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Sleep / Timer
	 Exit / Cancel / Clear
	 Display / Media
	 Back / Return
	 Shift + TV/Radio / Program
	 Audio / Lang I/II
	 Text / Goto
	 AV / Input / RDS
	 Up
	 CH+ / Page+
	 Down

Original	Replacement
	 CH- / Page-
	 Right
	 Left
	 Vol-
	 Menu / Home
	 OK
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/-
	 0





Original	Replacement	Original	Replacement
LAST	Shift + Back / Return		
P.STD	Smart / List		
S.STD	Eject / Surround		
ARC	Stop / Hold		
STILL	Pause / Step / Freeze		
Zoom-	Zoom / Size		
Zoom+	Setup / OPT /		
Multi-PiP	TV/Radio /		
Size	Shift + Zoom /		
S.Swap	Subtitle / EQ		
Win-Sel	D.Menu / Top		
Locate	Sound / Title		
Swap	Picture / Format		

Original	Replacement

