

 


 



 
 
 












 

 



 

 



 

 

 



 









Original	Replacement
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + Guide / EPG / -/--
	 0
	 Back / Return
	 Picture / Format
	 Sound / Title
	 Fav / Marker / PC

Original	Replacement
	 Vol+
	 Audio / Lang I/II
	 CH+ / Page+
	 Vol-
	 Subtitle / EQ
	 CH- / Page-
	 Smart / List
	 D.Menu / Top
	 Info / Angle
	 AV / Input / RDS
	 Up
	 Display / Media
	 Left
	 OK
	 Right
	 Menu / Home
	 Down





Original	Replacement	Original	Replacement
Exit	Exit / Cancel / Clear	Sleep	Sleep / Timer
Red	Red / Netflix / Search	T.Shift	TV/Radio /
Green	Green / APP / Repeat	Rec	Rec / Rec Mode
Yellow	Yellow / YouTube / Repeat	EPG	Guide / EPG / -/--
Blue	Blue / Prime Video / Random		
<< / Text/CC	<< / Tune-		
<< / Text/CC	Text / Goto		
Play/Pause /	Play / Slow		
Play/Pause /	Pause / Step / Freeze		
>> / Reveal	>> / Tune+		
I<< / Hold	I<< / Preset-		
I<< / Hold	Shift + Stop /		
>>I / Size	>>I / Preset+		
>>I / Size	Zoom / Size		
Stop / Index	Stop / Hold		
Aspect	Shift + Picture / Format		
Freeze	Shift + Pause / Step / Freeze		

