









 


 












 



















 

















Original	Replacement
 Power	 Power
 ambilight	 TV/Radio /
 prime video	 Shift + Blue / Prime
 Windows	 Display / Media
 Netflix	 Shift + Red / Netflix /
 Rakuten Tv	 Shift + Yellow / YouTube /
 Menu	 D.Menu / Top
 Smart Tv	 Smart / List
 Pair/Sources	 AV / Input / RDS
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 ←	 Back / Return
 Home	 Menu / Home
List/Tv Guide	Guide / EPG / -/--

Original	Replacement
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Exit/Tv	 Exit / Cancel / Clear
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 1	 1



